

TEK-AIDS' FORTH

An implementation for OSI systems

by
Gerald L. CLark



Editor: C. Adkins
The Software Federation, Inc.
44 University Drive
Arlington Heights, IL 60004

First edition
September, 1980

Copyright 1980
Software Federation Inc.

NOTICE:

The information contained in this document is subject to change without notice.

In no event will the Software Federation, Inc. or TEK-AIDS, Inc. be liable for any damages arising from the performance or non-performance of this licensed program product, or for any damages at any time caused by any dealer's or end user's failure to properly utilize this product, or for any lost profits or other consequential damages, or for any other claim against user or dealer by any other party.

Any type of reproduction or disclosure of this document is expressly forbidden without the expressed written consent of the Software Federation, Inc.

TEK AIDS' FORTH V1.0

an implementation of the FIG-FORTH model for OSI systems

CONTENTS

| | |
|--|---|
| I. SYSTEM OVERVIEW | |
| A. FEATURES..... | 1 |
| B. HARDWARE REQUIRED..... | 2 |
| C. THE FORTH INTEREST GROUP..... | 2 |
| II. DIFFERENCES FROM THE FIG MODEL | |
| A. ERROR CORRECTIONS..... | 2 |
| B. I/O CONTROL VARIABLES..... | 3 |
| C. 6502 ASSEMBLER..... | 3 |
| D. NEW FORTH WORDS..... | 4 |
| E. VIDEO SYSTEM WORDS..... | 4 |
| III. SYSTEM UTILITIES | |
| A. EDITING..... | 5 |
| B. DISKING..... | 6 |
| D. PRINTING..... | 7 |
| IV. DEVELOPING YOUR SYSTEM | |
| A. RECOMPILING THE SYSTEM..... | 8 |
| B. DOUBLE-SIDED DISK SUPPORT..... | 9 |
| C. CHANGING MEMORY SIZE..... | 9 |
| D. UTILIZING THE AUTOLOAD FEATURE..... | 9 |

I. SYSTEM OVERVIEW

TEK-AIDS' FORTH is an adaptation for OSI hardware of the FORTH model developed by the FORTH interest group in San Carlos, Calif. It is a complete operating system and user-extensible programming language modeled after and built around the kernel of primitive functions developed by FIG.

A. FEATURES

The system includes about 350 defined words which load from the disk when you boot the system. About 200 of these are factory assembled and not easily modified. These comprise the primitive routines such as "+" and "OR", the virtual disk system, and the interpretive compiler. The other 150 or so words define formatted numeric output functions, compiler conditionals and the assembler. There are also several useful tool words in this group, which the user can modify to meet more specific needs. The FORTH source code for these words is supplied beginning at screen #6. For more details on user modifications, see "DEVELOPING YOUR SYSTEM", further on in this document.

TEK-AIDS' FORTH includes an autoloader feature which executes screen #1 upon boot. You can modify this screen to initiate whatever task you desire, allowing the development of a complete turnkey system.

This version contains a post-fix assembler, three utilities: DISKING, PRINTING and EDITING, and a line-printer driver for a Centronics compatible parallel printer, so you can begin work immediately. We have also included a version of the FIG teletype editor (screen #60) which has no cursor addressing, a nucleus for VOTRAX (OSI's voice I/O device) vocabulary, and some sample dynamic files, all for you to experiment with. For more information on the utilities and extensions to the fig-FORTH kernel, see others parts of this document.

This document is not meant to be a tutorial on FORTH, but an introduction to this particular implementation. We assume that the user has some familiarity with the concepts and unique style of FORTH.

I. SYSTEM OVERVIEW

Refer to the accompanying manuals: "fig-FORTH Installation Manual, Glossary and Model," and "Using FORTH" for a more complete introduction and tutorial on the language. BYTE magazine's August 1980 issue also has several articles on FORTH which we highly recommend.

B. HARDWARE REQUIRED

TEK-AIDS' FORTH will run on any serial or video Ohio Scientific computer with at least 16K of RAM and a single-sided disk. However, since all disk copying with DISKING requires two drives, a DUAL-DISK SYSTEM IS HIGHLY RECOMMENDED as the minimum configuration. Double-sided disks are supported, and the system can be easily reconfigured to run in more than 16K of RAM. For more details on this and other user modifications, see DEVELOPING YOUR SYSTEM, further on in this document.

C. THE FORTH INTEREST GROUP

The FORTH Interest Group (FIG) is a not-for-profit organization of FORTH devotees who wish to spread FORTH by developing versions for implementation on the most popular personal computing machines. Consequently, FIG has released much information about FORTH into the public domain, and by holding seminars and publishing newsletters and books on FORTH, FIG has helped to popularize a new system philosophy.

Although the kernel of TEK-AIDS FORTH is FIG-FORTH, it is interfaced to the user through copyrighted disk and terminal routines. Therefore, this is a copyrighted program and all rights are reserved.

II. DIFFERENCES FROM THE FIG MODEL

A. ERROR CORRECTIONS

There are few basic differences between the fig-FORTH model and TEK-AIDS' implementation. We have corrected an error in the FIG null word. Also, the FIG model contains a word "<", which should compare two words to determine whether the first is less than the second. However, this routine tested only the sign of the result and did not check for arithmetic overflow, thus it did not always return the correct result. The fig-6502 listing renamed this word "U<" and defined a new "<". Nevertheless, testing the sign only does not always give an accurate

II. DIFFERENCES FROM THE FIG MODEL

unsigned comparison. For example, "HEX C000 4000 <" returns a value of true if signs only are compared. In TEK-AIDS' version, "U<" only tests the carry flag and acts as a true unsigned comparison.

B. I/O CONTROL VARIABLES

In an attempt to make user interaction as flexible as possible, four new variables have been created: (TYPE0) (TYPE1) (READ) and (BREAK). These variables normally contain the compiled addresses of routines for output to the terminal; output to the printer; input from the terminal, and a terminal break routine, respectively.

-- (TYPE0)

EMIT, the normal output word, will cause execution of the variables (TYPE0) and (TYPE1), which should contain the compiled addresses of the output routines. (TYPE0) will contain a vector to the terminal the desired output routines. (TYPE0) is ALWAYS the primary output, and can be used to direct output to the terminal with the verb CRT. To direct output only to the printer, first load the screen with the printer driver (we've given you one on screen #45), and use the verb LPT. This loads (TYPE0) with the address of the printer driver.

-- (TYPE1)

(TYPE1) normally contains the address of DROP, a routine which throws away unwanted characters when printed output is not enabled. The verb LPTCRT, which enables output to both the printer and the CRT, loads vectors to the CRT driver and the printer driver into (TYPE0) and (TYPE1), respectively.

-- (READ)

KEY will cause execution of the address in this variable, which normally vectors to the compiled address of your input routine.

-- (BREAK)

Contains the address of the terminal break handling routine, and is executed by ?TERMINAL.

C. 6502 ASSEMBLER

This version does contain a postfix assembler. See the samples of CODE in the FIG installation manual for more details. The source code is included on disk.

II. DIFFERENCES FROM THE FIG MODEL

D. NEW FORTH WORDS

- 100-US
A 100 microsecond delay. VAL 100-US pauses VAL * 100 microseconds.
- ZERO-WRITE ADD SEC TRK ZERO-WRITE
Writes in track zero format to the specified address.
Used by the DISKING utility.
- ZERO-READ ADD SEC TRK ZERO-READ
Reads track zero format from specified address Used by DISKING.
- SEEK TRK SEEK
Seeks to given track. Used by the system.
- DISK-SELECT DRV DISK-SELECT
Selects given drive. Used by the system.
- SAFETY
A variable controlling write access. If 0, disk driver will not require a track match to write the first sector of a track. Automatically set after each transfer. Used by DISKING.
- CUR-TRK
A variable which returns head position of selected disk drive. Not used, but available.
- RESULT
A variable which returns the error code of the last disk function. Not used, but available for error handling, as in DISKING.
- DRIVE
A variable which returns currently selected drive. Not used, but available.

E. VIDEO SYSTEM WORDS

- TOPLINE
A variable which scrolls the display up to this line.
Must be a value from 0-15. Default value is "0".
- GRAPHICS
A variable used for character output masking. Normal value is hex 7F which is used to clear high order bit in character byte.

III. SYSTEM UTILITIES

- CURSOR
The low byte of this variable contains the cursor character. The high byte contains the blink flag (80) and the blink rate (01, 02, 04, 08, 10, 20, or 40).
- CURPOS
Variable which returns present cursor position relative to the top of the screen.
- BLINK Toggles blink flag.
- TOP Returns address of the top of scrollable display.
- CLS Clears scrollable display.
- SCROLL Scrolls to TOPLINE.
- POS Returns the next character print location.

III. SYSTEM UTILITIES

TEK-AIDS' fig-FORTH is shipped with three utilities, DISKING, EDITING and PRINTING. Each is initiated by loading the appropriate screen, as shown below.

A. EDITING

This editor is similar to the fig-Editor, but includes direct cursor addressing and is suitable for CRT editing. EDITING is currently setup for an ACT IV terminal, so you may have to do some small modifications. A 30 LOAD will load and execute EDITING. The commands are explained below.

Listing and looking at your screen.

- LIST lists given screen
- L list the current screen

Moving the edit cursor.

- TOP moves cursor to top of current screen.
- T moves cursor to the beginning of given line.
- M moves cursor + or - the number of spaces indicated.

Finding a given text string. Note that these text finding commands are NOT in FORTH's usual postfix notation. They take as their operand the string which begins with the first character following the " " (the

III. SYSTEM UTILITIES

space is the normal delimiter between FORTH words), and ends with a carriage return.

- F finds first occurrence of following text string from present location.
- N finds next occurrence of string.
- B back up to the beginning of the text string just found.

Inserting, deleting and copying text.

- TEXT accepts the following text into the pad.
- H hold the given line in the pad.
- R replace the given line with the pad.
- I insert pad before given line.
- S spread inserting blank line at given line.
- P place the following text on a given line.
- C insert the following text at current edit cursor position.
- D deletes given line.
- E erase given line.
- X delete next occurrence of following text.
- TILL delete up to and including the following text on this line.
- DELETE delete - or + number of characters from present cursor location.
- CLEAR clear given screen.

Miscellaneous commands:

- COPY copies first given screen to second given screen.
- WHERE prints the location of a compilation error.

B. DISKING

Type a "39 LOAD" to initiate the DISKING utility. The commands are explained below.

- SCREEN-COPY A self-prompting screen copier.
- BACKUP A self-prompting, track at a time screen copier.
- TEST Non-destructive test of a given screen.
- SWEEP Self-prompting, non-destructive disk test.
- INIT A self-prompting track initializer.
- TRACK-ZERO A self-prompting boot transfer routine.
- UNBOOT Unboots current system and its cold start

III. SYSTEM UTILITIES

parameters to whichever drive is currently selected. (DRO selects 0, DR1 selects 1). Current cold parameters MUST specify a system of less than 9K. To use UNBOOT, restart the FORTH kernel with "COLD". Type in the desired new commands and/or load any screens you want to be included in the modified system. Recompile (see more detailed instructions elsewhere), and then find out the size of the current system to be certain it is less than 9K. Type "HEX HERE . DECIMAL" and the system will report the current size. IF less than 2600, you may successfully UNBOOT. Now, if you need to, update the COLD parameters by typing "19 LOAD". System will respond with copyright notice and ask for your desired backspace key. Depress the desired key. If date is requested, enter it as prompted. Then load the DISKING utility by typing "39 LOAD". When an "OK" appears, select the desired drive, and type "UNBOOT". If you are unbooting to a new disk, be sure to INIT first, and do a TRACK-ZERO in order to write the bootstrap to the disk.

C. PRINTING

Type "45 LOAD" to use the PRINTING utility. A Centronics compatible printer driver is at screen 47 and must be loaded also before an "LPT" can successfully direct output to printer. If you have a different printer, you will have to write and install your own printer driver. The printing commands are explained below.

- L/P A constant indicating the total number of lines per page.
- T/P A constant indicating the number of printable lines per page.
- TOF Advances to top of form.
- INDEX Prints the top line of given screen range. "5 20 INDEX" will print the top line of screens 5 through 20.
- TRIAD Lists three screens. beginning with an integer multiple of three and containing the indicated screen. "5 TRIAD" would list screens 3,4,5.
- SHOW Prints all triads containing the given screen or screen range. "5 20 INDEX" will print all triads containing screens 5 through 20.

IV. DEVELOPING YOUR SYSTEM

-- DUMP Dumps memory locations in present base. "100 200 DUMP" dumps memory locations 100 to 200 to current output device.

IV. DEVELOPING YOUR SYSTEM

A. RECOMPILING THE SYSTEM

Most system modifications will require that you recompile the system and then UNBOOT to save the new system on disk, and make it permanent. Use the following commands sequences to recompile, and follow the UNBOOT directions elsewhere in this document.

```
0 FENCE !      (set FENCE at location 0)
FORTH          (use FORTH vocabulary)
FORGET '       (FORGET current dictionary to ')
6 LOAD         (loads and executes compiler)
```

After recompiling DISKING and UNBOOT can be used to save the new system. If you have a video system, note that the output routines are located in the recompilable sections of the source code. If anything before screen #8 has been changed, the system may crash while recompiling. Also, since the the output is vectored into the middle of new code, the system may hang. If this happens, reboot and use the following command sequence instead.

```
0 FENCE !      (set FENCE at 0)
FORTH          (use FORTH vocabulary)
' DROP CFA (TYPE0) FORGET 6 LOAD
               (puts DROP address in (TYPE0), which prevents
               a jump into the middle of code currently
               being compiled. You MUST reinstall the
               address of your new output routine in
               (TYPE0) once it has been determined.)
```

If you still have problems, you may have an error in your source code. Reboot, and load without FORGETting any words. This will leave the system intact for compilation but will result in a system too large to UNBOOT.

If you get an error message while loading a program, and cannot get the system to respond properly to keyboard input, you are probably stuck in the middle of an uncompleted definition. To force a return to command

IV. DEVELOPING YOUR SYSTEM

mode type "I ;S ", which forces the system out of compile mode and terminates the load.

B. DOUBLE-SIDED DISK SUPPORT

To modify your system to support double-sided disks, add the following definitions.

```
: DR2  462 OFFSET ! ;  
: DR1  693 OFFSET ! ;    (These are decimal values)
```

C. CHANGING MEMORY SIZE

TEK-AIDS' FORTH is initially configured for a memory of 16K. To reconfigure the system memory size, perform the following. Determine your memory size in HEX from the following table:

| | | |
|-------------|-------------|-------------|
| 16K....4000 | 28K....7000 | 40K....A000 |
| 20K....5000 | 32K....8000 | 44K....B000 |
| 24K....6000 | 36K....9000 | 48K....C000 |

The following example reconfigures a system for 32K. Substitute the HEX value appropriate for your system's memory size.

| | |
|---------------------------|--|
| HEX | (base is now HEX) |
| 8000 ' LIMIT ! | (store size in LIMIT) |
| LIMIT 404 3 * - ' FIRST ! | (calculate LIMIT for 3 buffers of 404 bytes each.) |
| FIRST PREV ! | (initialize buffers for use) |
| FIRST USE ! | |
| EMPTY-BUFFERS | (flush to avoid disk garbage) |

You now have a 32K system. To save it do the following:

| | |
|---------|--|
| COLD | (follow COLD prompts to reinit boot values) |
| 39 LOAD | (loads DISKING utility) |
| UNBOOT | (UNBOOTS system to currently selected drive) |

D. UTILIZING THE AUTOLOAD FEATURE

Upon boot, the system will execute screen 1, which contains code to initialize the COLD parameters and then list the system contents (which are also on screen #1). To develop a turnkey system requires the development and compilation of the desired words, and the insertion in screen #1 of a call for the execution of the desired screen.

fig-FORTH
INSTALLATION MANUAL
GLOSSARY
MODEL

RELEASE 1
WITH COMPILER SECURITY
AND
VARIABLE LENGTH NAMES

MAY 1979

Provided through the courtesy of the Forth Interest Group, P.O. Box 1105,
San Carlos, CA 94070.

Further distribution of this public domain publication must include this notice.

fig-FORTH INSTALLATION MANUAL

| | |
|-----|-----------------------|
| 1.0 | INTRODUCTION |
| 2.0 | DISTRIBUTION |
| 3.0 | MODEL ORGANIZATION |
| 4.0 | INSTALLATION |
| 5.0 | MEMORY MAP |
| 6.0 | DOCUMENTATION SUMMARY |

1.0 INTRODUCTION

The fig-FORTH implementation project occurred because a key group of Forth fanciers wished to make this valuable tool available on a personal computing level. In June of 1978, we gathered a team of nine systems level programmers, each with a particular target computer. The charter of the group was to translate a common model of Forth into assembly language listings for each computer. It was agreed that the group's work would be distributed in the public domain by FIG. This publication series is the conclusion of the work.

2.0 DISTRIBUTION

All publications of the Forth Interest Group are public domain. They may be further reproduced and distributed by inclusion of this credit notice:

This publication has been made available by the Forth Interest Group,
P. O. Box 1105, San Carlos, Ca 94070

We intend that our primary recipients of the Implementation Project be computer users groups, libraries, and commercial vendors. We expect that each will further customize for particular computers and redistribute. No restrictions are placed on cost, but we

expect faithfulness to the model. FIG does not intend to distribute machine readable versions, as that entails customization, revision, and customer support better reserved for commercial vendors.

Of course, another broad group of recipients of the work is the community of personal computer users. We hope that our publications will aid in the use of Forth and increase the user expectation of the performance of high level computer languages.

3.0 MODEL ORGANIZATION

The fig-FORTH model deviates a bit from the usual loading method of Forth. Existing systems load about 2k bytes in object form and then self-compile the resident system (6 to 8 k bytes). This technique allows customization within the high level portion, but is impractical for new implementors.

Our model has 4 to 5 k bytes written as assembler listings. The remainder may be compiled typing in the Forth high-level source, by more assembly source, or by disc compilation. This method enhances transportability, although the larger portion in assembly code entails more effort. About 8k bytes of memory is used plus 2 to 8k for workspace.

3.1 MODEL OVER-VIEW

The model consists of 7 distinct areas. They occur sequentially from low memory to high.

- Boot-up parameters
- Machine code definitions
- High level utility definitions
- Installation dependent code
- High level definitions
- System tools (optional)
- RAM memory workspace

3.2 MODEL DETAILS

Boot-up Parameters

This area consists of 34 bytes containing a jump to the cold start, jump to the warm re-start and initial values for user variables and registers. These values are altered as you make permanent extensions to your installation.

Machine Code Definitions

This area consists of about 600 to 800 bytes of machine executable code in the form of Forth word definitions. Its purpose is to convert your computer into a standard Forth stack computer. Above this code, the balance of Forth contains a pseudo-code compiled of "execution-addresses" which are sequences of the machine address of the "code-fields" of other Forth definitions. All execution ultimately refers to the machine code definitions.

High-level Utility Definitions

These are colon-definitions, user variables, constants, and variables that allow you to control the "Forth stack computer". They comprise the bulk of the system, enabling you to execute and compile from the terminal. If disc storage (or a RAM simulation of disc) is available, you may also execute and compile from this facility. Changes in the high-level area are infrequent. They may be made thru the assembler source listings.

Installation Dependent Code

This area is the only portion that need change between different installations of the same computer cpu. There are four code fragments:

(KEY) Push the next ascii value (7 bits) from the terminal keystroke to the computation stack and execute NEXT. High 9 bits are zero. Do not echo this character, especially a control character.

(EMIT) Pop the computation stack (16 bit value). Display the low 7 bits on the terminal device, then execute NEXT. Control characters have their natural functions.

(?TERMINAL) For terminals with a break key, wait till released and push to the computation stack 0001 if it was found depressed; otherwise 0000. Execute NEXT. If no break key is available, sense any key depression as a break (sense but don't wait for a key). If both the above are unavailable, simply push 0000 and execute NEXT.

(CR) Execute a terminal carriage return and line feed. Execute NEXT.

When each of these words is executed, the interpreter vectors from the definition header to these code sequences. On specific implementations it may be necessary to preserve certain registers and observe operating system protocols. Understand the implementors methods in the listing before proceeding!

R/W This colon-definition is the standard linkage to your disc. It requests the read or write of a disc sector. It usually requires supporting code definitions. It may consist of self-contained code or call ROM monitor code. When R/W is assembled, its code field address is inserted once in BLOCK and once in BUFFER.

An alternate version of R/W is included that simulates disc storage in RAM. If you have over 16 k bytes this is practical for startup and limited operation with cassette.

High-level Definitions

The next section contains about 30 definitions involving user interaction: compiling aids, finding, forgetting, listing, and number formatting. These definitions are placed above the installation dependent code to facilitate modification. That is, once your full system is up, you may FORGET part of the high-level and re-compile altered definitions from disc.

Sytsem Tools

A text editor and machine code assembler are normally resident. We are including a sample editor, and hope to provide Forth assemblers. The editor is compiled from the terminal the first time, and then used to place the editor and assembler source code on disc.

It is essential that you regard the assembly listing as just a way to get Forth installed on your system. Additions and changes must be planned and tested at the usual Forth high level and then the assembly routines updated. Forth work planned and executed only at an assembly level tends to be non-portable, and confusing.

RAM Workspace

For a single user system, at least 2k bytes must be available above the compiled system (the dictionary). A 16k byte total system is most typical.

The RAM workspace contains the computation and return stacks, user area, terminal input buffer, disc buffer and compilation space for the dictionary.

4.0 INSTALLATION

We see the following methods of getting a functioning fig-FORTH system:

1. Buy loadable object code from a vendor who has customized.
2. Obtain an assembly listing with the installation dependent code supplied by the vendor. Assemble and execute.
3. Edit the FIG assembly listing on your system, re-write the I-O routines, and assemble.
4. Load someone else's object code up to the installation dependent code. Hand assemble equivalents for your system and poke in with your monitor. Begin execution and type in (self-compile) the rest of the system. This takes

about two hours once you understand the structure of Forth (but that will take much more time!).

Let us examine Step 3, above, in fuller detail. If you wish to bring up Forth only from this model, here are the sequential steps:

4.1 Familiarize yourself with the model written in Forth, the glossary, and specific assembly listings.

4.2 Edit the assembly listings into your system. Set the boot-up parameters at origin offset 0A, 0B (bytes) to 0000 (warning=00).

4.3 Alter the terminal support code (KEY, EMIT, etc.) to match your system. Observe register protocol specific to your implementation!

4.4 Place a break to your monitor at the end of NEXT, just before indirectly jumping via register W to execution. W is the Forth name for the register holding a code field address, and may be differently referenced in your listings.

4.5 Enter the cold start at the origin. Upon the break, check that the interpretive pointer IP points within ABORT and W points to SP!. If COLD is a colon-definition, then the IP has been initialized on the way to NEXT and your testing will begin in COLD. The purpose of COLD is to initialize IP, SP, RP, UP, and some user variables from the start-up parameters at the origin.

4.6 Continue execution one word at a time. Clever individuals could write a simple trace routine to print IP, W, SP, RP and the top of the stacks. Run in this single step mode until the greeting message is printed. Note that the interpretation is several hundred cycles to this stage!

4.7 Execution errors may be localized by observing the above pointers when a crash occurs.

4.8 After the word QUIT is executed (incrementally), and you can input a "return" key and get OK printed, remove the break. You may have some remaining errors, but a reset and examination of the above registers will again localize problems.

4.9 When the system is interpreting from the keyboard, execute EMPTY-BUFFERS to clear the disc buffer area. You may test the disc access by typing: 0 BLOCK 64 TYPE. This should bring sector zero from the disc to a buffer and type the first 64 characters. This sector usually contains ascii text of the disc directory. If BLOCK (and R/W) doesn't function--happy hunting!

5.0 If your disc driver differs from the assembly version, you must create your own R/W. This word does a range check (with error message), modulo math to derive sector, track, and drive and passes values to a sector-read and sector-write routine.

RAM DISC SIMULATION

If disc is not available, a simulation of BLOCK and BUFFER may be made in RAM. The following definitions setup high memory as mass storage. Referenced 'screens' are then brought to the 'disc buffer' area. This is a good method to test the start-up program even if disc may be available.

```
HEX
4000 CONSTANT LO ( START OF BUFFER AREA )
6800 CONSTANT HI ( 10 SCREEN EQUIVALENT )
: R/W >R ( save boolean )
  B/BUF * LO + DUP
  HI > 6 ?ERROR ( range check )
  R> IF ( read ) SWAP ENDIF
  B/BUF CMOVE ;
```

Insert the code field address of R/W into BLOCK and BUFFER and proceed as if testing disc. R/W simulates screens 0 thru 9 when B/BUF is 128, in the memory area \$4000 thru \$6BFF.

fig-FORTH VARIABLE NAME FIELD

A major FIG innovation in this model, is the introduction of variable length definition names in compiled dictionary entries. Previous methods only saved three letters and the character count.

The user may select the letter count saved, up to the full natural length. See the glossary definition for WIDTH.

In this model, the following conventions have been established.

1. The first byte of the name field has the natural character count in the low 5 bits.
2. The sixth bit = 1 when smudged, and will prevent a match by (FIND).
3. The seventh bit = 1 for IMMEDIATE definitions; it is called the precedence bit.
4. The eighth or sign bit is always = 1.
5. The following bytes contain the names' letters, up to the value in WIDTH.
6. In the byte containing the last letter saved, the sign bit = 1.
7. In word addressing computer, a name may be padded with a blank to a word boundary.

The above methods are implemented in CREATE. Remember that -FIND uses BL WORD to bring the next text to HERE with the count preceeding. All that is necessary, is to limit by WIDTH and toggle the proper delimiting bits.

5.0 MEMORY MAP

The following memory map is broadly used. Specific installations may require alterations but you may forfeit functions in future FIG offerings.

The disc buffer area is at the upper bound of RAM memory. It is comprised of an integral number of buffers, each B/BUF+4 bytes. B/BUF is the number of bytes read from the disc, usually one sector. B/BUF must be a power of two (64, 128, 256, 512 or 1024). The constant FIRST has the value of the address of the start of the first buffer. LIMIT has the value of the first address beyond the top buffer. The distance between FIRST and LIMIT must be N*(B/BUF+4) bytes. This N must be two or more.

Constant B/SCR has the value of the number of buffers per screen; i.e. 1024 / B/BUF.

The user area must be at least 34 bytes; 48 is more appropriate. In a multi-user system, each user has his own user area, for his copy of system variables. This method allows re-entrant use of the Forth vocabulary.

The terminal input buffer is decimal 80 bytes (the hex 50 in QUERY) plus 2 at the end. If a different value is desired, change the limit in QUERY. A parameter in the boot-up literals locates the address of this area for TIB. The backspace character is also in the boot-up origin parameters. It is universally expected that "rubout" is the backspace.

The return stack grows downward from the user area toward the terminal buffer. Forty-eight bytes are sufficient. The origin is in R0 (R-zero) and is loaded from a boot-up literal.

The computation stack grows downward from the terminal buffer toward the dictionary, which grows upward. The origin of the stack is in variable S0 (S-zero) and is loaded from a boot-up literal.

After a cold start, the user variables contain the addresses of the above memory assignments. An advanced user may relocate while the system is running. A newcomer should alter the startup literals and execute COLD. The word +ORIGIN is provided for this purpose. +ORIGIN gives the address byte or word relative to the origin depending on the computer addressing method. To change the backspace to control H type:

```
HEX 08 0E +ORIGIN ! ( byte addresses)
```

6.0 DOCUMENTATION SUMMARY

The following manuals are in print:

Caltech FORTH Manual, an advanced manual with internal details of Forth. Has some implementation peculiarities. Approx. \$6.50 from the Caltech Book Store, Pasadena, CA.


Kitt Peak Forth Primer, \$20.00 postpaid from the Forth Interest Group, P. O. Box 1105, San Carlos, CA 94070.

microFORTH Primer, \$15.00 Forth, Inc. 815 Manhattan Ave. Manhattan Beach, CA 90266

Forth Dimensions, newsletter of the Forth Interest Group, \$5.00 for 6 issues including membership. F.I.G. P.O. Box 1105, San Carlos, CA. 94070


STANDARD

fig-FORTH MEMORY MAP

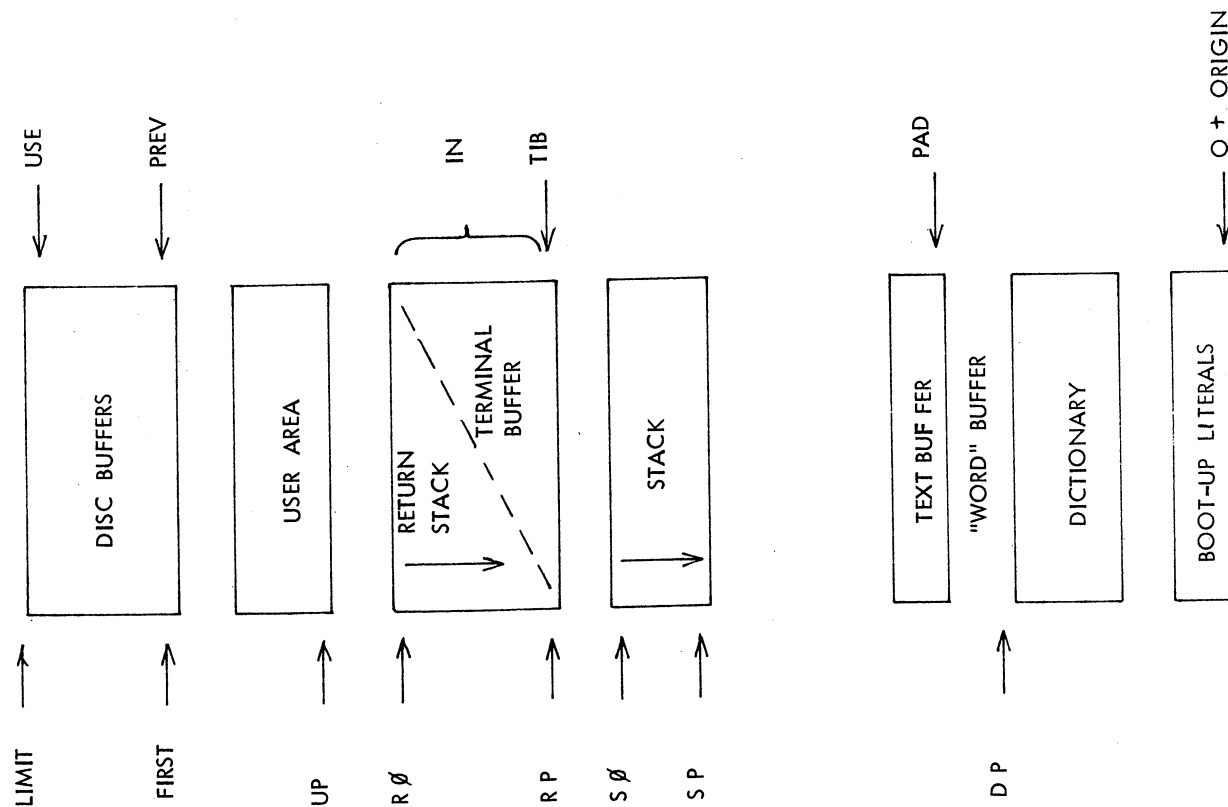

6502

fig-FORTH MEMORY MAP

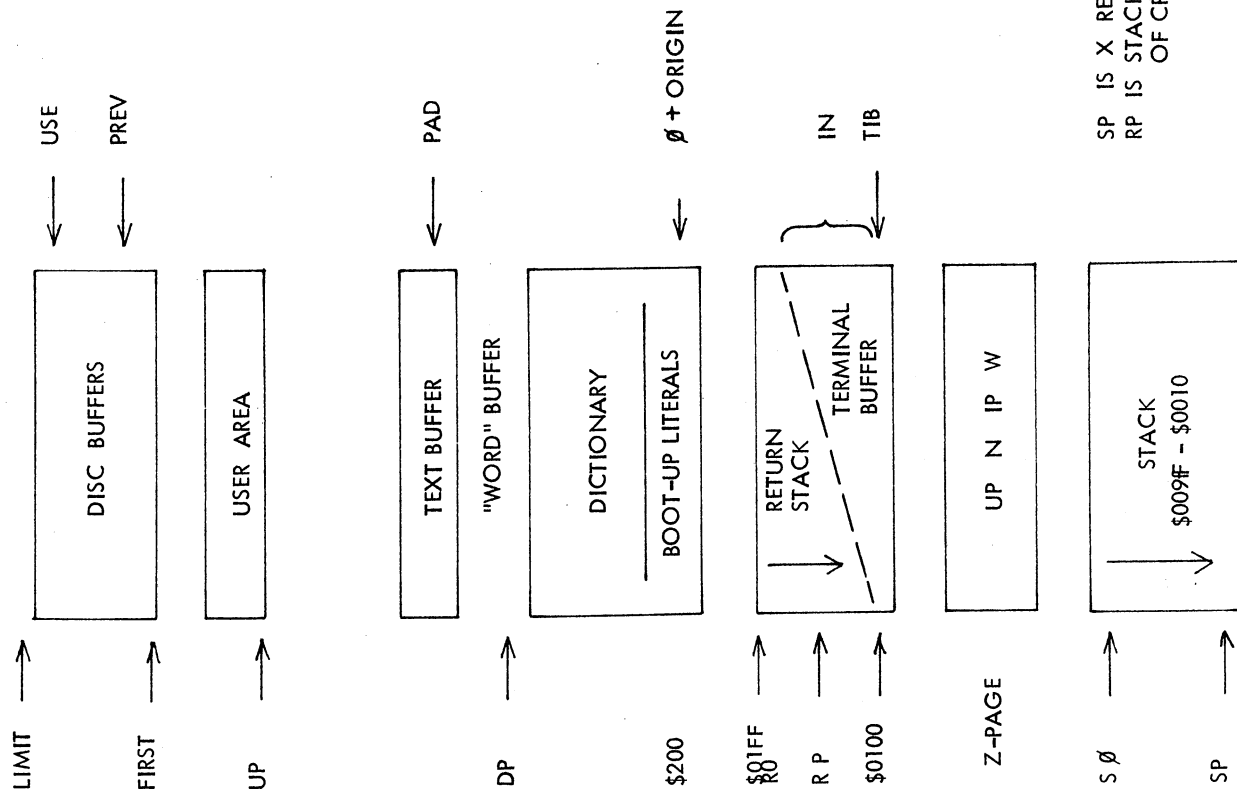

SP IS X REGISTER
RP IS STACK POINTER
OF CPU

fig-FORTH GLOSSARY

This glossary contains all of the word definitions in Release 1 of fig-FORTH. The definitions are presented in the order of their ascii sort.

The first line of each entry shows a symbolic description of the action of the procedure on the parameter stack. The symbols indicate the order in which input parameters have been placed on the stack. Three dashes "---" indicate the execution point; any parameters left on the stack are listed. In this notation, the top of the stack is to the right.

The symbols include:

| | |
|------|---|
| addr | memory address |
| b | 8 bit byte (i.e. hi 8 bits zero) |
| c | 7 bit ascii character (hi 9 bits zero) |
| d | 32 bit signed double integer, most significant portion with sign on top of stack. |
| f | boolean flag. 0=false, non-zero=true |
| ff | boolean false flag=0 |
| n | 16 bit signed integer number |
| u | 16 bit unsigned integer |
| tf | boolean true flag=non-zero |

The capital letters on the right show definition characteristics:

| | |
|----|---|
| C | May only be used within a colon definition. A digit indicates number of memory addresses used, if other than one. |
| E | Intended for execution only. |
| L0 | Level Zero definition of FORTH-78 |
| L1 | Level One definition of FORTH-78 |
| P | Has precedence bit set. Will execute even when compiling. |
| U | A user variable. |

Unless otherwise noted, all references to numbers are for 16 bit signed integers. On 8 bit data bus computers, the high byte of a number is on top of the stack, with the sign in the leftmost bit. For 32 bit signed double numbers, the most significant part (with the sign) is on top.

All arithmetic is implicitly 16 bit signed integer math, with error and under-flow indication unspecified.

| | | | | | |
|---------|---|------|----------|---|----|
| ! | n addr --- Store 16 bits of n at address. Pronounced "store". | L0 | (+LOOP) | n --- The run-time procedure compiled by +LOOP, which increments the loop index by n and tests for loop completion. See +LOOP. | C2 |
| !CSP | Save the stack position in CSP. Used as part of the compiler security. | | (ABORT) | Executes after an error when WARNING is -1. This word normally executes ABORT, but may be altered (with care) to a user's alternative procedure. | |
| # | d1 --- d2 Generate from a double number d1, the next ascii character which is placed in an output string. Result d2 is the quotient after division by BASE, and is maintained for further processing. Used between <# and #>. See #S. | L0 | (DO) | The run-time procedure compiled by DO which moves the loop control parameters to the return stack. See DO. | C |
| #> | d --- addr count Terminates numeric output conversion by dropping d, leaving the text address and character count suitable for TYPE. | L0 | (FIND) | addr1 addr2 --- pfa b tf (ok) addr1 addr2 --- ff (bad) Searches the dictionary starting at the name field address addr2, matching to the text at addr1. Returns parameter field address, length byte of name field and boolean true for a good match. If no match is found, only a boolean false is left. | |
| #S | d1 --- d2 Generates ascii text in the text output buffer, by the use of #, until a zero double number n2 results. Used between <# and #>. | L0 | (LINE) | n1 n2 --- addr count Convert the line number n1 and the screen n2 to the disc buffer address containing the data. A count of 64 indicates the full line text length. | |
| | --- addr Used in the form: nnnn Leaves the parameter field address of dictionary word nnnn. As a compiler directive, executes in a colon-definition to compile the address as a literal. If the word is not found after a search of CONTEXT and CURRENT, an appropriate error message is given. Pronounced "tick". | P,L0 | (LOOP) | The run-time procedure compiled by LOOP which increments the loop index and tests for loop completion. See LOOP. | C2 |
| (| Used in the form: (cccc) Ignore a comment that will be delimited by a right parenthesis on the same line. May occur during execution or in a colon-definition. A blank after the leading parenthesis is required. | P,L0 | (NUMBER) | d1 addr1 --- d2 addr2 Convert the ascii text beginning at addr1+1 with regard to BASE. The new value is accumulated into double number d1, being left as d2. Addr2 is the address of the first unconvertable digit. Used by NUMBER. | |
| (.) | The run-time procedure, compiled by ., which transmits the following in-line text to the selected output device. See . | C+ | * | n1 n2 --- prod Leave the signed product of two signed numbers. | L0 |
| (;CODE) | The run-time procedure, compiled by ;CODE, that rewrites the code field of the most recently defined word to point to the following machine code sequence. See ;CODE. | C | */ | n1 n2 n3 --- n4 Leave the ratio n4 = n1*n2/n3 where all are signed numbers. Retention of an intermediate 31 bit product permits greater accuracy than would be available with the sequence: n1 n2 * n3 / | L0 |
| | | | */MOD | n1 n2 n3 --- n4 n5 Leave the quotient n5 and remainder n4 of the operation n1*n2/n3. A 31 bit intermediate product is used as for */. | L0 |

| | |
|--|--|
| <p>+ n1 n2 --- sum L0 -DUP Leave the sum of n1+n2.</p> <p>+! n addr --- L0 Add n to the value at the address. Pronounced "plus-store".</p> <p>+ - n1 n2 --- n3 Apply the sign of n2 to n1, which is left as n3.</p> <p>+BUF addl --- addr2 f Advance the disc buffer address addl to the address of the next buffer addr2. Boolean f is false when addr2 is the buffer presently pointed to by variable PREV.</p> <p>+LOOP n1 --- (run) addr n2 --- (compile) P,C2,L0 Used in a colon-definition in the form: DO ... n1 +LOOP At run-time, +LOOP selectively controls branching back to the cor- responding DO based on n1, the loop index and the loop limit. The signed increment n1 is added to the index and the total compared to the limit. The branch back to DO occurs until the new index is equal to or greater than the limit (n1>0), or until the new index is equal to or less than the limit (n1<0). Upon exiting the loop, the parameters are discarded and execution continues ahead.</p> <p>At compile time, +LOOP compiles the run-time word (+LOOP) and the branch offset computed from HERE to the address left on the stack by DO. n2 is used for compile time error checking.</p> <p>+ORIGIN n --- addr Leave the memory address relative by n to the origin parameter area. n is the minimum address unit, either byte or word. This definition is used to access or modify the boot-up parameters at the origin area.</p> <p>, n --- L0 Store n into the next available dict- ionary memory cell, advancing the dictionary pointer. (comma)</p> <p>- n1 n2 --- diff L0 Leave the difference of n1-n2.</p> <p>--> P,L0 Continue interpretation with the next disc screen. (pronounced next-screen).</p> | <p> n1 -- n1 (if zero) n1 -- n1 n1 (non-zero) L0 Reproduce n1 only if it is non-zero. This is usually used to copy a value just before IF, to eliminate the need for an ELSE part to drop it.</p> <p>-FIND --- pfa b tf (found) --- ff (not found) Accepts the next text word (delimited by blanks) in the input stream to HERE, and searches the CONTEXT and then CURRENT vocabularies for a matching entry. If found, the dictionary entry's parameter field address, its length byte, and a boolean true is left. Otherwise, only a boolean false is left.</p> <p>-TRAILING addr n1 --- addr n2 Adjusts the character count n1 of a text string beginning address to suppress the output of trailing blanks. i.e. the characters at addr+n1 to addr+n2 are blanks.</p> <p>. n --- L0 Print a number from a signed 16 bit two's complement value, converted according to the numeric BASE. A trailing blanks follows. Pronounced "dot".</p> <p>." P, Used in the form: "." cccc" Compiles an in-line string cccc (delimitted by the trailing ") with an execution procedure to transmit the text to the selected output device. If executed outside a definition, "." will immediately print the text until the final ". The maximum number of characters may be an installation dependent value. See (.").</p> <p>..LINE line scr --- Print on the terminal device, a line of text from the disc by its line and screen number. Trailing blanks are suppressed.</p> <p>.R n1 n2 --- Print the number n1 right aligned in a field whose width is n2. No following blank is printed.</p> <p>/ n1 n2 --- quot L0 Leave the signed quotient of n1/n2.</p> <p>/MOD n1 n2 --- rem quot L0 Leave the remainder and signed quotient of n1/n2. The remainder has the sign of the dividend.</p> |
|--|--|

| | | | |
|-----------|--|--------|---|
| ?ERROR | f n --- Issue an error message number n, if the boolean flag is true. | B/BUF | --- n This constant leaves the number of bytes per disc buffer, the byte count read from disc by BLOCK. |
| ?EXEC | Issue an error message if not executing. | B/SCR | --- n This constant leaves the number of blocks per editing screen. By convention, an editing screen is 1024 bytes organized as 16 lines of 64 characters each. |
| ?LOADING | Issue an error message if not loading | | |
| ?PAIRS | n1 n2 --- Issue an error message if n1 does not equal n2. The message indicates that compiled conditionals do not match. | BACK | addr --- Calculate the backward branch offset from HERE to addr and compile into the next available dictionary memory address. |
| ?STACK | Issue an error message is the stack is out of bounds. This definition may be installation dependent. | BASE | --- addr U,LO A user variable containing the current number base used for input and output conversion. |
| ?TERMINAL | --- f Perform a test of the terminal keyboard for actuation of the break key. A true flag indicates actuation. This definition is installation dependent. | BEGIN | --- addr n (compiling) P,LO Occurs in a colon-definition in form: BEGIN ... UNTIL BEGIN ... AGAIN BEGIN ... WHILE ... REPEAT At run-time, BEGIN marks the start of a sequence that may be repetitively executed. It serves as a return point from the corresponding UNTIL, AGAIN or REPEAT. When executing UNTIL, a return to BEGIN will occur if the top of the stack is false; for AGAIN and REPEAT a return to BEGIN always occurs. At compile time BEGIN leaves its return address and n for compiler error checking. |
| @ | addr --- n L0 Leave the 16 bit contents of address. | | |
| ABORT | L0 Clear the stacks and enter the execution state. Return control to the operators terminal, printing a message appropriate to the installation. | | |
| ABS | n --- u L0 Leave the absolute value of n as u. | BL | --- c A constant that leaves the ascii value for "blank". |
| AGAIN | addr n --- (compiling) P,C2,L0 Used in a colon-definition in the form: BEGIN ... AGAIN At run-time, AGAIN forces execution to return to corresponding BEGIN. There is no effect on the stack. Execution cannot leave this loop (unless R> DROP is executed one level below). At compile time, AGAIN compiles BRANCH with an offset from HERE to addr. n is used for compile-time error checking. | BLANKS | addr count --- Fill an area of memory beginning at addr with blanks. |
| ALLOT | n --- L0 Add the signed number to the dictionary pointer DP. May be used to reserve dictionary space or re-origin memory. n is with regard to computer address type (byte or word). | BLK | --- addr U,LO A user variable containing the block number being interpreted. If zero, input is being taken from the terminal input buffer. |
| AND | n1 n2 --- n2 L0 Leave the bitwise logical and of n1 and n2 as n3. | BLOCK | n --- addr L0 Leave the memory address of the block buffer containing block n. If the block is not already in memory, it is transferred from disc to which ever buffer was least recently written. If the block occupying that buffer has been marked as updated, it is re-written to disc before block n is read into the buffer. See also BUFFER, R/W UPDATE FLUSH |

BLOCK-READ

BLOCK-WRITE These are the preferred names for the installation dependent code to read and write one block to the disc.

BRANCH

C2,L0

The run-time procedure to unconditionally branch. An in-line offset is added to the interpretive pointer IP to branch ahead or back. **BRANCH** is compiled by **ELSE**, **AGAIN**, **REPEAT**.

BUFFER

n --- addr
Obtain the next memory buffer, assigning it to block n. If the contents of the buffer is marked as updated, it is written to the disc. The block is not read from the disc. The address left is the first cell within the buffer for data storage.

C!

b addr ---
Store 8 bits at address. On word addressing computers, further specification is necessary regarding byte addressing.

C,

b ---
Store 8 bits of b into the next available dictionary byte, advancing the dictionary pointer. This is only available on byte addressing computers, and should be used with caution on byte addressing mini-computers.

C@

addr --- b
Leave the 8 bit contents of memory address. On word addressing computers, further specification is needed regarding byte addressing.

CFA

pfa --- cfa
Convert the parameter field address of a definition to its code field address.

CMOVE

from to count ---
Move the specified quantity of bytes beginning at address from to address to. The contents of address from is moved first proceeding toward high memory. Further specification is necessary on word addressing computers.

COLD

The cold start procedure to adjust the dictionary pointer to the minimum standard and restart via **ABORT**. May be called from the terminal to remove application programs and restart.

COMPILE

C2

When the word containing **COMPILE** executes, the execution address of the word following **COMPILE** is copied (compiled) into the dictionary. This allows specific compilation situations to be handled in addition to simply compiling an execution address (which the interpreter already does).

CONSTANT

n --- L0
A defining word used in the form:
n **CONSTANT** cccc
to create word cccc, with its parameter field containing n. When cccc is later executed, it will push the value of n to the stack.

CONTEXT

--- addr U,L0
A user variable containing a pointer to the vocabulary within which dictionary searches will first begin.

COUNT

addr1 --- addr2 n L0
Leave the byte address addr2 and byte count n of a message text beginning at address addr1. It is presumed that the first byte at addr1 contains the text byte count and the actual text starts with the second byte. Typically **COUNT** is followed by **TYPE**.

CR

Transmit a carriage return and line feed to the selected output device. L0

CREATE

A defining word used in the form:
CREATE cccc
by such words as **CODE** and **CONSTANT** to create a dictionary header for a Forth definition. The code field contains the address of the words parameter field. The new word is created in the **CURRENT** vocabulary.

CSP

---- addr U
A user variable temporarily storing the stack pointer position, for compilation error checking.

D+

d1 d2 --- dsum
Leave the double number sum of two double numbers.

D+-

d1 n --- d2
Apply the sign of n to the double number d1, leaving it as d2.

D.

d --- L1
Print a signed double number from a 32 bit two's complement value. The high-order 16 bits are most accessible on the stack. Conversion is performed according to the current **BASE**. A blank follows. Pronounced D-dot.

```

DMINUS      d1  ---  d2
             Convert d1 to its double number two's
             complement.

```

```

DRO      Installation dependent commands to
DR1      select disc drives, by presetting
          OFFSET. The contents of OFFSET is
          added to the block number in BLOCK
          to allow for this selection. Offset
          is suppressed for error text so that
          it may always originate from drive

```

| | | | | |
|---------------|---|---------|---------|--|
| DROP | n --- | L0 | ENDIF | addr n --- (compile) P,C0,L0 |
| | Drop the number from the stack. | | | Occurs in a colon-definition in form: IF ... ENDIF IF ... ELSE ... ENDIF |
| DUMP | addr n --- | L0 | | At run-time, ENDIF serves only as the destination of a forward branch from IF or ELSE. It marks the conclusion of the conditional structure. THEN is another name for ENDIF. Both names are supported in fig-FORTH. See also IF and ELSE. |
| | Print the contents of n memory locations beginning at addr. Both addresses and contents are shown in the current numeric base. | | | |
| DUP | n --- n n | L0 | | At compile-time, ENDIF computes the forward branch offset from addr to HERE and stores it at addr. n is used for error tests. |
| | Duplicate the value on the stack. | | | |
| ELSE | addr1 n1 --- addr2 n2 (compiling) P,C2,L0 | | ERASE | addr n --- |
| | Occurs within a colon-definition in the form: IF ... ELSE ... ENDIF | | | Clear a region of memory to zero from addr over n addresses. |
| | At run-time, ELSE executes after the true part following IF. ELSE forces execution to skip over the following false part and resumes execution after the ENDIF. It has no stack effect. | | ERROR | line --- in blk |
| | At compile-time ELSE emplaces BRANCH reserving a branch offset, leaves the address addr2 and n2 for error testing. ELSE also resolves the pending forward branch from IF by calculating the offset from addr1 to HERE and storing at addr1. | | | Execute error notification and re-start of system. WARNING is first examined. If 1, the text of line n, relative to screen 4 of drive 0 is printed. This line number may be positive or negative, and beyond just screen 4. If WARNING=0, n is just printed as a message number (non disc installation). If WARNING is -1, the definition (ABORT) is executed, which executes the system ABORT. The user may cautiously modify this execution by altering (ABORT). fig-FORTH saves the contents of IN and BLK to assist in determining the location of the error. Final action is execution of QUIT. |
| EMIT | c --- | L0 | | |
| | Transmit ascii character c to the selected output device. OUT is incremented for each character output. | | | |
| EMPTY-BUFFERS | | L0 | EXECUTE | addr -- |
| | Mark all block-buffers as empty, not necessarily affecting the contents. Updated blocks are not written to the disc. This is also an initialization procedure before first use of the disc. | | | Execute the definition whose code field address is on the stack. The code field address is also called the compilation address. |
| ENCLOSE | addr1 c --- ddr1 n1 n2 n3 | | EXPECT | addr count --- |
| | The text scanning primitive used by WORD. From the text address addr1 and an ascii delimiting character c, is determined the byte offset to the first non-delimiter character n1, the offset to the first delimiter after the text n2, and the offset to the first character not included. This procedure will not process past an ascii 'null', treating it as an unconditional delimiter. | | | L0 Transfer characters from the terminal to address, until a "return" or the count of characters have been received. One or more nulls are added at the end of the text. |
| END | | P,C2,L0 | FENCE | --- addr |
| | This is an 'alias' or duplicate definition for UNTIL. | | | U A user variable containing an address below which FORGETting is trapped. To forget below this point the user must alter the contents of FENCE. |
| | | | FILL | addr quan b --- |
| | | | | Fill memory at the address with the specified quantity of bytes b. |
| | | | FIRST | --- n |
| | | | | A constant that leaves the address of the first (lowest) block buffer. |

| | | | | |
|--------|---|------|-----------|---|
| FLD | --- addr A user variable for control of number output field width. Presently unused in fig-FORTH. | U | IF | f --- (run-time) --- addr n (compile) P,C2,L0 Occurs is a colon-definition in form: IF (tp) ... ENDIF IF (tp) ... ELSE (fp) ... ENDIF At run-time, IF selects execution based on a boolean flag. If f is true (non-zero), execution continues ahead thru the true part. If f is false (zero), execution skips till just after ELSE to execute the false part. After either part, execution resumes after ENDIF. ELSE and its false part are optional; if missing, false execution skips to just after ENDIF. |
| FORGET | Executed in the form: FORGET cccc Deletes definition named cccc from the dictionary with all entries physically following it. In fig-FORTH, an error message will occur if the CURRENT and CONTEXT vocabularies are not currently the same. | E,L0 | | |
| FORTH | The name of the primary vocabulary. Execution makes FORTH the CONTEXT vocabulary. Until additional user vocabularies are defined, new user definitions become a part of FORTH. FORTH is immediate, so it will execute during the creation of a colon-definition, to select this vocabulary at compile time. | P,L1 | | At compile-time IF compiles OBRANCH and reserves space for an offset at addr. addr and n are used later for resolution of the offset and error testing. |
| | | | IMMEDIATE | Mark the most recently made definition so that when encountered at compile time, it will be executed rather than being compiled. i.e. the precedence bit in its header is set. This method allows definitions to handle unusual compiling situations, rather than build them into the fundamental compiler. The user may force compilation of an immediate definition by preceding it with [COMPILE]. |
| HERE | --- addr Leave the address of the next available dictionary location. | L0 | | |
| HEX | Set the numeric conversion base to sixteen (hexadecimal). | L0 | | |
| HLD | --- addr A user variable that holds the address of the latest character of text during numeric output conversion. | L0 | IN | --- addr L0 A user variable containing the byte offset within the current input text buffer (terminal or disc) from which the next text will be accepted. WORD uses and moves the value of IN. |
| HOLD | c --- Used between <# and #> to insert an ascii character into a pictured numeric output string. e.g. 2E HOLD will place a decimal point. | L0 | INDEX | from to --- Print the first line of each screen over the range from, to. This is used to view the comment lines of an area of text on disc screens. |
| I | --- n Used within a DO-LOOP to copy the loop index to the stack. Other use is implementation dependent. See R. | C,L0 | INTERPRET | The outer text interpreter which sequentially executes or compiles text from the input stream (terminal or disc) depending on STATE. If the word name cannot be found after a search of CONTEXT and then CURRENT it is converted to a number according to the current base. That also failing, an error message echoing the name with a " ?" will be given. Text input will be taken according to the convention for WORD. If a decimal point is found as part of a number, a double number value will be left. The decimal point has no other purpose than to force this action. See NUMBER. |
| ID. | addr --- Print a definition's name from its name field address. | | | |

| | | | | |
|---------|--|---------|-------|--|
| KEY | --- c | LO | LOOP | addr n --- (compiling) P,C2,L0 Occurs in a colon-definition in form: DO ... LOOP At run-time, LOOP selectively controls branching back to the corresponding DO based on the loop index and limit. The loop index is incremented by one and compared to the limit. The branch back to DO occurs until the index equals or exceeds the limit; at that time, the parameters are discarded and execution continues ahead. |
| LATEST | --- addr | | | |
| | Leave the name field address of the topmost word in the CURRENT vocabulary. | | | |
| LEAVE | | C,L0 | | |
| | Force termination of a DO-LOOP at the next opportunity by setting the loop limit equal to the current value of the index. The index itself remains unchanged, and execution proceeds normally until LOOP or +LOOP is encountered. | | | |
| LFA | pfa --- lfa | | | |
| | Convert the parameter field address of a dictionary definition to its link field address. | | | |
| LIMIT | ---- n | | | |
| | A constant leaving the address just above the highest memory available for a disc buffer. Usually this is the highest system memory. | | | |
| LIST | n --- | LO | M/MOD | ud1 u2 --- u3 ud4 An unsigned mixed magnitude math operation which leaves a double quotient ud4 and remainder u3, from a double dividend ud1 and single divisor u2. |
| | Display the ascii text of screen n on the selected output device. SCR contains the screen number during and after this process. | | | |
| LIT | --- n | C2,L0 | | |
| | Within a colon-definition, LIT is automatically compiled before each 16 bit literal number encountered in input text. Later execution of LIT causes the contents of the next dictionary address to be pushed to the stack. | | | |
| LITERAL | n --- (compiling) | P,C2,L0 | | |
| | If compiling, then compile the stack value n as a 16 bit literal. This definition is immediate so that it will execute during a colon definition. The intended use is: : xxx [calculate] LITERAL ; Compilation is suspended for the compile time calculation of a value. Compilation is resumed and LITERAL compiles this value. | | | |
| | | MAX | | n1 n2 --- max L0 Leave the greater of two numbers. |
| | | MESSAGE | | n --- Print on the selected output device the text of line n relative to screen 4 of drive 0. n may be positive or negative. MESSAGE may be used to print incidental text such as report headers. If WARNING is zero, the message will simply be printed as a number (disc un-available). |
| | | MIN | | n1 n2 --- min L0 Leave the smaller of two numbers. |
| | | MINUS | | n1 --- n2 L0 Leave the two's complement of a number. |
| LOAD | n --- | LO | | |
| | Begin interpretation of screen n. Loading will terminate at the end of the screen or at ;S. See ;S and -->. | | | |
| | | MOD | | n1 n2 --- mod L0 Leave the remainder of n1/n2, with the same sign as n1. |
| | | MON | | |
| | Exit to the system monitor, leaving a re-entry to Forth, if possible. | | | |

| | | | |
|--------|--|-------|--|
| MOVE | addr1 addr2 n --- Move the contents of n memory cells (16 bit contents) beginning at addr1 into n cells beginning at addr2. The contents of addr1 is moved first. This definition is appropriate on on word addressing computers. | PAD | --- addr L0 Leave the address of the text output buffer, which is a fixed offset above HERE. |
| NEXT | This is the inner interpreter that uses the interpretive pointer IP to execute compiled Forth definitions. It is not directly executed but is the return point for all code procedures. It acts by fetching the address pointed by IP, storing this value in register W. It then jumps to the address pointed to by the address pointed to by W. W points to the code field of a definition which contains the address of the code which executes for that definition. This usage of indirect threaded code is a major contributor to the power, portability, and extensibility of Forth. Locations of IP and W are computer specific. | PFA | nfa --- pfa Convert the name field address of a compiled definition to its parameter field address. |
| NFA | pfa --- nfa Convert the parameter field address of a definition to its name field. | POP | The code sequence to remove a stack value and return to NEXT. POP is not directly executable, but is a Forth re-entry point after machine code. |
| NUMBER | addr --- d Convert a character string left at addr with a preceeding count, to a signed double number, using the current numeric base. If a decimal point is encountered in the text, its position will be given in DPL, but no other effect occurs. If numeric conversion is not possible, an error message will be given. | PREV | ---- addr A variable containing the address of the disc buffer most recently referenced. The UPDATE command marks this buffer to be later written to disc. |
| OFFSET | --- addr U A user variable which may contain a block offset to disc drives. The contents of OFFSET is added to the stack number by BLOCK. Messages by MESSAGE are independent of OFFSET. See BLOCK, DR0, DR1, MESSAGE. | PUSH | This code sequence pushes machine registers to the computation stack and returns to NEXT. It is not directly executable, but is a Forth re-entry point after machine code. |
| OR | n1 n2 -- or L0 Leave the bit-wise logical or of two 16 bit values. | PUT | This code sequence stores machine register contents over the topmost computation stack value and returns to NEXT. It is not directly executable, but is a Forth re-entry point after machine code. |
| OUT | --- addr U A user variable that contains a value incremented by EMIT. The user may alter and examine OUT to control display formatting. | QUERY | Input 80 characters of text (or until a "return") from the operators terminal. Text is positioned at the address contained in TIB with IN set to zero. |
| OVER | n1 n2 --- n1 n2 n1 L0 Copy the second stack value, placing it as the new top. | QUIT | L1 Clear the return stack, stop compilation, and return control to the operators terminal. No message is given. |
| | | R | --- n Copy the top of the return stack to the computation stack. |
| | | R# | --- addr U A user variable which may contain the location of an editing cursor, or other file related function. |

| | | | |
|--------|--|----------|--|
| R/W | addr blk f --- The fig-FORTH standard disc read-write linkage. addr specifies the source or destination block buffer, blk is the sequential number of the referenced block; and f is a flag for f=0 write and f=1 read. R/W determines the location on mass storage, performs the read-write and performs any error checking. | | |
| R> | --- n L0 Remove the top value from the return stack and leave it on the computation stack. See >R and R. | SP! | A computer dependent procedure to initialize the stack pointer from S0. |
| R0 | --- addr U A user variable containing the initial location of the return stack. Pronounced R-zero. See RP! | SP@ | --- addr A computer dependent procedure to return the address of the stack position to the top of the stack, as it was before SP@ was executed. (e.g. 1 2 SP@ @ . . . would type 2 2 1) |
| REPEAT | addr n --- (compiling) P,C2 Used within a colon-definition in the form: BEGIN ... WHILE ... REPEAT At run-time, REPEAT forces an unconditional branch back to just after the corresponding BEGIN. At compile-time, REPEAT compiles BRANCH and the offset from HERE to addr. n is used for error testing. | SPACE | L0 Transmit an ascii blank to the output device. |
| ROT | n1 n2 n3 --- n2 n3 n1 L0 Rotate the top three values on the stack, bringing the third to the top. | SPACES | n --- L0 Transmit n ascii blanks to the output device. |
| RP! | A computer dependent procedure to initialize the return stack pointer from user variable R0. | STATE | --- addr L0,U A user variable containing the compilation state. A non-zero value indicates compilation. The value itself may be implementation dependent. |
| S->D | n --- d Sign extend a single number to form a double number. | SWAP | n1 n2 --- n2 n1 L0 Exchange the top two values on the stack. |
| S0 | --- addr U A user variable that contains the initial value for the stack pointer. Pronounced S-zero. See SP! | TASK | A no-operation word which can mark the boundary between applications. By forgetting TASK and re-compiling, an application can be discarded in its entirety. |
| SCR | --- addr U A user variable containing the screen number most recently reference by LIST. | THEN | P,C0,L0 An alias for ENDIF. |
| SIGN | n d --- d L0 Stores an ascii "-" sign just before a converted numeric output string in the text output buffer when n is negative. n is discarded, but double number d is maintained. Must be used between <# and #>. | TIB | --- addr U A user variable containing the address of the terminal input buffer. |
| | | TOGGLE | addr b --- Complement the contents of addr by the bit pattern b. |
| | | TRAVERSE | addr1 n --- addr2 Move across the name field of a fig-FORTH variable length name field. addr1 is the address of either the length byte or the last letter. If n=1, the motion is toward hi memory; if n=-1, the motion is toward low memory. The addr2 resulting is address of the other end of the name. |

| | | | | |
|--------|--|------------|------|---|
| TRIAD | scr --- Display on the selected output device the three screens which include that numbered scr, beginning with a screen evenly divisible by three. Output is suitable for source text records, and includes a reference line at the bottom taken from line 15 of screen4. | VARIABLE | E,LO | A defining word used in the form: n VARIABLE cccc When VARIABLE is executed, it creates the definition cccc with its parameter field initialized to n. When cccc is later executed, the address of its parameter field (containing n) is left on the stack, so that a fetch or store may access this location. |
| TYPE | addr count --- LO Transmit count characters from addr to the selected output device. | VOC-LINK | U | --- addr A user variable containing the address of a field in the definition of the most recently created vocabulary. All vocabulary names are linked by these fields to allow control for FORGETting thru multiple vocabularys. |
| U* | u1 u2 --- ud Leave the unsigned double number product of two unsigned numbers. | | | |
| U/ | ud u1 --- u2 u3 Leave the unsigned remainder u2 and unsigned quotient u3 from the unsigned double dividend ud and unsigned divisor u1. | VOCABULARY | E,L | A defining word used in the form: VOCABULARY cccc to create a vocabulary definition cccc. Subsequent use of cccc will make it the CONTEXT vocabulary which is searched first by INTERPRET. The sequence "cccc DEFINITIONS" will also make cccc the CURRENT vocabulary into which new definitions are placed. In fig-FORTH, cccc will be so chained as to include all definitions of the vocabulary in which cccc is itself defined. All vocabularys ultimately chain to Forth. By convention, vocabulary names are to be declared IMMEDIATE. See VOC-LINK. |
| UNTIL | f --- (run-time) addr n --- (compile) P,C2,LO Occurs within a colon-definition in the form: BEGIN ... UNTIL At run-time, UNTIL controls the conditional branch back to the corresponding BEGIN. If f is false, execution returns to just after BEGIN; if true, execution continues ahead. At compile-time, UNTIL compiles (OBRANCH) and an offset from HERE to addr. n is used for error tests. | VLIST | | List the names of the definitions in the context vocabulary. "Break" will terminate the listing. |
| UPDATE | LO Marks the most recently referenced block (pointed to by PREV) as altered. The block will subsequently be transferred automatically to disc should its buffer be required for storage of a different block. | WARNING | U | --- addr A user variable containing a value controlling messages. If = 1 disc is present, and screen 4 of drive 0 is the base location for messages. If = 0, no disc is present and messages will be presented by number. If = -1, execute (ABORT) for a user specified procedure. See MESSAGE, ERROR. |
| USE | --- addr A variable containing the address of the block buffer to use next, as the least recently written. | | | |
| USER | n --- LO A defining word used in the form: n USER cccc which creates a user variable cccc. The parameter field of cccc contains n as a fixed offset relative to the user pointer register UP for this user variable. When cccc is later executed, it places the sum of its offset and the user area base address on the stack as the storage address of that particular variable. | WHILE | | f --- (run-time) ad1 n1 --- ad1 n1 ad2 n2 P,C2 Occurs in a colon-definition in the form: BEGIN ... WHILE (tp) ... REPEAT At run-time, WHILE selects conditional execution based on boolean flag f. If f is true (non-zero), WHILE continues execution of the true part thru to REPEAT, which then branches back to BEGIN. If f is false (zero), execution skips to just after REPEAT, exiting the structure. At compile time, WHILE emplaces (OBRANCH) and leaves ad2 of the reserved offset. The stack values will be resolved by REPEAT. |

```

WIDTH      ---  addr      U
In fig-FORTH, a user variable containing the maximum number of letters saved in the compilation of a definitions' name. It must be 1 thru 31, with a default value of 31. The name character count and its natural characters are saved, up to the value in WIDTH. The value may be changed at any time within the above limits.

```

```

WORD          c  ---          LO
Read the next text characters from
the input stream being interpreted,
until a delimiter c is found, storing
the packed character string begining
at the dictionary buffer HERE.  WORD
leaves the character count in the
first byte, the characters, and ends
with two or more blanks. Leading
occurrences of c are ignored.  If BLK
is zero, text is taken from the
terminal input buffer, otherwise from
the disc block stored in BLK.
See BLK, IN.

```

X This is pseudonym for the "null"
or dictionary entry for a name of
one character of ascii null. It
is the execution procedure to term-
minate interpretation of a line of
text from the terminal or within
a disc buffer, as both buffers always
have a null at the end.

```
XOR          n1 n2 --- xor          L1
Leave the bitwise logical exclusive-
or of two values.
```

```

[                                     P, L1
Used in a colon-definition in form:
      : xxx [ words ] more ;
Suspend compilation. The words after
[ are executed, not compiled. This
allows calculation or compilation
exceptions before resuming compilation with ]. See LITERAL. ].

```

```
[COMPILE]                                     P,C
Used in a colon-definition in form:
      : xxx  [COMPILE]  FORTH  ;
[COMPILE] will force the compilation
of an immediate definition,
that would otherwise execute
during compilation.  The above
example will select the FORTH
vocabulary when xxx executes, rather
than at compile time.
```

L1

Resume compilation, to the completion
of a colon-definition. See [.

SCR # 3

```
0 ***** fig-FORTH MODEL *****
1
2           Through the courtesy of
3
4           FORTH INTEREST GROUP
5           P. O. BOX 1105
6           SAN CARLOS, CA. 94070
7
8
9           RELEASE 1
10          WITH COMPILER SECURITY
11          AND
12          VARIABLE LENGTH NAMES
13
14
15          Further distribution must include the above notice.
```

SCR # 4

```
0 ( ERROR MESSAGES )
1 EMPTY STACK
2 DICTIONARY FULL
3 HAS INCORRECT ADDRESS MODE
4 ISN'T UNIQUE
5
6 DISC RANGE ?
7 FULL STACK
8 DISC ERROR !
9
10
11
12
13
14
15 FORTH INTEREST GROUP
```

MAY 1, 1979

SCR # 5

```
0 ( ERROR MESSAGES )
1 COMPILATION ONLY, USE IN DEFINITION
2 EXECUTION ONLY
3 CONDITIONALS NOT PAIRED
4 DEFINITION NOT FINISHED
5 IN PROTECTED DICTIONARY
6 USE ONLY WHEN LOADING
7 OFF CURRENT EDITING SCREEN
8 DECLARE VOCABULARY
9
10
11
12
13
14
15
```

FORTH INTEREST GROUP

MAY 1, 1979

| | | | |
|---|--|----|----|
| CODE LIT | (PUSH FOLLOWING LITERAL TO STACK *) | 1 | 13 |
| LABEL PUSH | (PUSH ACCUM AS HI-BYTE, ML STACK AS LO-BYTE *) | 4 | 13 |
| LABEL PUT | (REPLACE BOTTOM WITH ACCUM. AND ML STACK *) | 6 | 13 |
| LABEL NEXT | (EXECUTE NEXT FORTH ADDRESS, MOVING IP *) | 8 | 13 |
| HERE ' <CLIT> ! HERE 2+ , | (MAKE SILENT WORD *) | 1 | 14 |
| LABEL SETUP (MOVE # ITEMS FROM STACK TO 'N' AREA OF Z-PAGE | *) | 4 | 14 |
| CODE EXECUTE | (EXECUTE A WORD BY ITS CODE FIELD *) | 9 | 14 |
| | (ADDRESS ON THE STACK *) | 10 | 14 |
| CODE BRANCH | (ADJUST IP BY IN-LINE 16 BIT LITERAL *) | 1 | 15 |
| CODE OBRANCH | (IF BOT IS ZERO, BRANCH FROM LITERAL *) | 6 | 15 |
| CODE (LOOP) | (INCREMENT LOOP INDEX, LOOP UNTIL => LIMIT *) | 1 | 16 |
| CODE (+LOOP) | (INCREMENT INDEX BY STACK VALUE +/- *) | 8 | 16 |
| CODE (DO) | (MOVE TWO STACK ITEMS TO RETURN STACK *) | 2 | 17 |
| CODE I | (COPY CURRENT LOOP INDEX TO STACK *) | 9 | 17 |
| CODE DIGIT | (CONVERT ASCII CHAR-SECOND, WITH BASE-BOTTOM *) | 1 | 18 |
| | (IF OK RETURN DIGIT-SECOND, TRUE-BOTTOM; *) | 2 | 18 |
| | (OTHERWISE FALSE-BOTTOM. *) | 3 | 18 |
| CODE (FIND) | (HERE, NFA ... PFA, LEN BYTE, TRUE; ELSE FALSE *) | 1 | 19 |
| CODE ENCLOSE | (ENTER WITH ADDRESS-2, DELIM-1. RETURN WITH *) | 1 | 20 |
| | (ADDR-4, AND OFFSET TO FIRST CH-3, END WORD-2, NEXT CH-1 *) | 2 | 20 |
| CODE EMIT | (PRINT ASCII VALUE ON BOTTOM OF STACK *) | 5 | 21 |
| CODE KEY | (ACCEPT ONE TERMINAL CHARACTER TO THE STACK *) | 7 | 21 |
| CODE ?TERMINAL | ('BREAK' LEAVES 1 ON STACK; OTHERWISE 0 *) | 9 | 21 |
| CODE CR | (EXECUTE CAR. RETURN, LINE FEED ON TERMINAL *) | 11 | 21 |
| CODE CMOVE | (WITHIN MEMORY; ENTER W/ FROM-3, TO-2, QUAN-1 *) | 1 | 22 |
| CODE U* | (16 BIT MULTIPLICAND-2, 16 BIT MULTIPLIER-1 *) | 1 | 23 |
| | (32 BIT UNSIGNED PRODUCT: LO WORD-2, HI WORD-1 *) | 2 | 23 |
| CODE U/ | (31 BIT DIVIDEND-2, -3, 16 BIT DIVISOR-1 *) | 1 | 24 |
| | (16 BIT REMAINDER-2, 16 BIT QUOTIENT-1 *) | 2 | 24 |
| CODE AND | (LOGICAL BITWISE AND OF BOTTOM TWO ITEMS *) | 2 | 25 |
| CODE OR | (LOGICAL BITWISE 'OR' OF BOTTOM TWO ITEMS *) | 6 | 25 |
| CODE XOR | (LOGICAL 'EXCLUSIVE-OR' OF BOTTOM TWO ITEMS *) | 10 | 25 |
| CODE SP@ | (FETCH STACK POINTER TO STACK *) | 1 | 26 |
| CODE SP! | (LOAD SP FROM 'SO' *) | 5 | 26 |
| CODE RP! | (LOAD RP FROM RO *) | 8 | 26 |
| CODE ;S | (RESTORE IP REGISTER FROM RETURN STACK *) | 12 | 26 |
| CODE LEAVE | (FORCE EXIT OF DO-LOOP BY SETTING LIMIT *) | 1 | 27 |
| XSAVE STX, TSX, R LDA, R 2+ STA, | (TO INDEX *) | 2 | 27 |
| CODE >R | (MOVE FROM COMP. STACK TO RETURN STACK *) | 5 | 27 |
| CODE R> | (MOVE FROM RETURN STACK TO COMP. STACK *) | 8 | 27 |
| CODE R | (COPY THE BOTTOM OF RETURN STACK TO COMP. STACK *) | 11 | 27 |
| CODE 0= | (REVERSE LOGICAL STATE OF BOTTOM OF STACK *) | 2 | 28 |
| CODE 0< | (LEAVE TRUE IF NEGATIVE; OTHERWISE FALSE *) | 6 | 28 |
| CODE + | (LEAVE THE SUM OF THE BOTTOM TWO STACK ITEMS *) | 1 | 29 |
| CODE D+ | (ADD TWO DOUBLE INTEGERS, LEAVING DOUBLE *) | 4 | 29 |
| CODE MINUS | (TWOS COMPLEMENT OF BOTTOM SINGLE NUMBER *) | 9 | 29 |
| CODE DMINUS | (TWOS COMPLEMENT OF BOTTOM DOUBLE NUMBER *) | 12 | 29 |
| CODE OVER | (DUPLICATE SECOND ITEM AS NEW BOTTOM *) | 1 | 30 |
| CODE DROP | (DROP BOTTOM STACK ITEM *) | 4 | 30 |
| CODE SWAP | (EXCHANGE BOTTOM AND SECOND ITEMS ON STACK *) | 7 | 30 |
| CODE DUP | (DUPLICATE BOTTOM ITEM ON STACK *) | 11 | 30 |
| CODE +! | (ADD SECOND TO MEMORY 16 BITS ADDRESSED BY BOTTOM *) | 2 | 31 |
| CODE TOGGLE | (BYTE AT ADDRESS-2, BIT PATTERN-1 ... *) | 7 | 31 |
| CODE @ | (REPLACE STACK ADDRESS WITH 16 BIT *) | 1 | 32 |
| BOT X) LDA, PHA, | (CONTENTS OF THAT ADDRESS *) | 2 | 32 |
| CODE C@ | (REPLACE STACK ADDRESS WITH POINTED 8 BIT BYTE *) | 5 | 32 |
| CODE ! | (STORE SECOND AT 16 BITS ADDRESSED BY BOTTOM *) | 8 | 32 |

```

CODE C!          ( STORE SECOND AT BYTE ADDRESSED BY BOTTOM *)_ 12 32
: :              ( CREATE NEW COLON-DEFINITION UNTIL ';' *)_ 2 33
: ;              ( TERMINATE COLON-DEFINITION *)_ 9 33
: CONSTANT       ( WORD WHICH LATER CREATES CONSTANTS *)_ 1 34
: VARIABLE       ( WORD WHICH LATER CREATES VARIABLES *)_ 5 34
: USER           ( CREATE USER VARIABLE *)_ 10 34
20 CONSTANT BL   CR ( ASCII BLANK *)_ 4 35
40 CONSTANT C/L   ( TEXT CHARACTERS PER LINE *)_ 5 35
3BE0 CONSTANT FIRST ( FIRST BYTE RESERVED FOR BUFFERS *)_ 7 35
4000 CONSTANT LIMIT ( JUST BEYOND TOP OF RAM *)_ 8 35
80 CONSTANT B/BUF ( BYTES PER DISC BUFFER *)_ 9 35
8 CONSTANT B/SCR ( BLOCKS PER SCREEN = 1024 B/BUF / *)_ 10 35
: +ORIGIN LITERAL + ; ( LEAVES ADDRESS RELATIVE TO ORIGIN *)_ 13 35
HEX              ( 0 THRU 5 RESERVED, REFERENCED TO $00A0 *)_ 1 36
( 06 USER SO )   ( TOP OF EMPTY COMPUTATION STACK *)_ 2 36
( 08 USER RO )   ( TOP OF EMPTY RETURN STACK *)_ 3 36
0A USER TIB      ( TERMINAL INPUT BUFFER *)_ 4 36
0C USER WIDTH    ( MAXIMUM NAME FIELD WIDTH *)_ 5 36
0E USER WARNING  ( CONTROL WARNING MODES *)_ 6 36
10 USER FENCE    CR ( BARRIER FOR FORGETTING *)_ 7 36
12 USER DP       ( DICTIONARY POINTER *)_ 8 36
14 USER VOC-LINK ( TO NEWEST VOCABULARY *)_ 9 36
16 USER BLK      ( INTERPRETATION BLOCK *)_ 10 36
18 USER IN       ( OFFSET INTO SOURCE TEXT *)_ 11 36
1A USER OUT      ( DISPLAY CURSOR POSITION *)_ 12 36
1C USER SCR      ( EDITING SCREEN *)_ 13 36
1E USER OFFSET   ( POSSIBLY TO OTHER DRIVES *)_ 1 37
20 USER CONTEXT  ( VOCABULARY FIRST SEARCHED *)_ 2 37
22 USER CURRENT  ( SEARCHED SECOND, COMPILED INTO *)_ 3 37
24 USER STATE    ( COMPILATION STATE *)_ 4 37
26 USER BASE     CR ( FOR NUMERIC INPUT-OUTPUT *)_ 5 37
28 USER DPL      ( DECIMAL POINT LOCATION *)_ 6 37
2A USER FLD      ( OUTPUT FIELD WIDTH *)_ 7 37
2C USER CSP      ( CHECK STACK POSITION *)_ 8 37
2E USER R#       ( EDITING CURSOR POSITION *)_ 9 37
30 USER HLD      ( POINTS TO LAST CHARACTER HELD IN PAD *)_ 10 37
: 1+ 1 + ;       ( INCREMENT STACK NUMBER BY ONE *)_ 1 38
: 2+ 2 + ;       ( INCREMENT STACK NUMBER BY TWO *)_ 2 38
: HERE DP @ ;    ( FETCH NEXT FREE ADDRESS IN DICT. *)_ 3 38
: ALLOT DP +! ;  ( MOVE DICT. POINTER AHEAD *)_ 4 38
: , HERE ! 2 ALLOT ; CR ( ENTER STACK NUMBER TO DICT. *)_ 5 38
: C, HERE C! 1 ALLOT ; ( ENTER STACK BYTE TO DICT. *)_ 6 38
: - MINUS + ;    ( LEAVE DIFF. SEC - BOTTOM *)_ 7 38
: = - 0= ;      ( LEAVE BOOLEAN OF EQUALITY *)_ 8 38
: < - 0< ;      ( LEAVE BOOLEAN OF SEC < BOT *)_ 9 38
: > SWAP < ;    ( LEAVE BOOLEAN OF SEC > BOT *)_ 10 38
: ROT >R SWAP R> SWAP ; ( ROTATE THIRD TO BOTTOM *)_ 11 38
: SPACE BL EMIT ; CR ( PRINT BLANK ON TERMINAL *)_ 12 38
: -DUP DUP IF DUP ENDIF ; ( DUPLICATE NON-ZERO *)_ 13 38
: TRAVERSE      ( MOVE ACROSS NAME FIELD *)_ 1 39
( ADDRESS-2, DIRECTION-1, I.E. -1=R TO L, +1=L TO R *)_ 2 39
: LATEST CURRENT @ @ ; ( NFA OF LATEST WORD *)_ 6 39
: LFA 4 - ;      ( CONVERT A WORDS PFA TO LFA *)_ 11 39
: CFA 2 - ; CR   ( CONVERT A WORDS PFA TO CFA *)_ 12 39
: NFA 5 - -1 TRAVERSE ; ( CONVERT A WORDS PFA TO NFA *)_ 13 39
: PFA 1 TRAVERSE 5 + ; ( CONVERT A WORDS NFA TO PFA *)_ 14 39
: !CSP SP@ CSP ! ; ( SAVE STACK POSITION IN 'CSP' *)_ 1 40

```



```

: ?ERROR          ( BOOLEAN-2,  ERROR TYPE-1,  WARN FOR TRUE *)_ 3 40
: ?COMP  STATE @  0= 11 ?ERROR ;  ( ERROR IF NOT COMPILING *)_ 6 40
: ?EXEC  STATE @  12 ?ERROR ;  ( ERROR IF NOT EXECUTING *)_ 8 40
: ?PAIRS - 13 ?ERROR ;  ( VERIFY STACK VALUES ARE PAIRED *)_ 10 40
: ?CSP  SP@  CSP @ - 14 ?ERROR ;  ( VERIFY STACK POSITION *)_ 12 40
: ?LOADING          ( VERIFY LOADING FROM DISC *)_ 14 40
: COMPILE          ( COMPILE THE EXECUTION ADDRESS FOLLOWING *)_ 2 41
: [ 0 STATE ! ; IMMEDIATE          ( STOP COMPILATION *)_ 5 41
: ] CO STATE ! ;          ( ENTER COMPILATION STATE *)_ 7 41
: SMUDGE  LATEST 20 TOGGLE ;  ( ALTER LATEST WORD NAME *)_ 9 41
: HEX 10 BASE ! ;          ( MAKE HEX THE IN-OUT BASE *)_ 11 41
: DECIMAL 0A BASE ! ;          ( MAKE DECIMAL THE IN-OUT BASE *)_ 13 41
: (;CODE)          ( WRITE CODE FIELD POINTING TO CALLING ADDRESS *)_ 2 42
: ;CODE          ( TERMINATE A NEW DEFINING WORD *)_ 6 42
: <BUILDS 0 CONSTANT ;  ( CREATE HEADER FOR 'DOES>' WORD *)_ 2 43
: DOES>          ( REWRITE PFA WITH CALLING HI-LEVEL ADDRESS *)_ 4 43
                  ( REWRITE CFA WITH 'DOES>' CODE *)_ 5 43
: COUNT  DUP 1+ SWAP C@ ;  ( LEAVE TEXT ADDR. CHAR. COUNT *)_ 1 44
: TYPE          ( TYPE STRING FROM ADDRESS-2, CHAR.COUNT-1 *)_ 2 44
: -TRAILING      ( ADJUST CHAR. COUNT TO DROP TRAILING BLANKS *)_ 5 44
: (".")          ( TYPE IN-LINE STRING, ADJUSTING RETURN *)_ 8 44
: ." 22 STATE @          ( COMPILE OR PRINT QUOTED STRING *)_ 12 44
: EXPECT          ( TERMINAL INPUT MEMORY-2, CHAR LIMIT-1 *)_ 2 45
: X BLK @          ( END-OF-TEXT IS NULL *)_ 11 45
: FILL          ( FILL MEMORY BEGIN-3, QUAN-2, BYTE-1 *)_ 1 46
: ERASE          ( FILL MEMORY WITH ZEROS BEGIN-2, QUAN-1 *)_ 4 46
: BLANKS          ( FILL WITH BLANKS BEGIN-2, QUAN-1 *)_ 7 46
: HOLD          ( HOLD CHARACTER IN PAD *)_ 10 46
: PAD  HERE 44 + ;          ( PAD IS 68 BYTES ABOVE HERE *)_ 13 46
                  ( DOWNWARD HAS NUMERIC OUTPUTS; UPWARD MAY HOLD TEXT *)_ 14 46
: WORD          ( ENTER WITH DELIMITER, MOVE STRING TO 'HERE' *)_ 1 47
: (NUMBER)      ( CONVERT DOUBLE NUMBER, LEAVING UNCONV. ADDR. *)_ 1 48
: NUMBER        ( ENTER W/ STRING ADDR. LEAVE DOUBLE NUMBER *)_ 6 48
: -FIND          ( RETURN PFA-3, LEN BYTE-2, TRUE-1; ELSE FALSE *)_ 12 48
: (ABORT) GAP ( ABORT ) ;  ( USER ALTERABLE ERROR ABORT *)_ 2 49
: ERROR          ( WARNING: -1=ABORT, 0=NO DISC, 1=DISC *)_ 4 49
                  WARNING @ 0<          ( PRINT TEXT LINE REL TO SCR #4 *)_ 5 49
: ID.          ( PRINT NAME FIELD FROM ITS HEADER ADDRESS *)_ 9 49
: CREATE          ( A SMUDGED CODE HEADER TO PARAM FIELD *)_ 2 50
                  ( WARNING IF DUPLICATING A CURRENT NAME *)_ 3 50
: [COMPILE]      ( FORCE COMPILATION OF AN IMMEDIATE WORD *)_ 2 51
: LITERAL          ( IF COMPILING, CREATE LITERAL *)_ 5 51
: DLITERAL        ( IF COMPILING, CREATE DOUBLE LITERAL *)_ 8 51
: ?STACK          ( QUESTION UPON OVER OR UNDERFLOW OF STACK *)_ 13 51
: INTERPRET      ( INTERPRET OR COMPILE SOURCE TEXT INPUT WORDS *)_ 2 52
: IMMEDIATE        ( TOGGLE PREC. BIT OF LATEST CURRENT WORD *)_ 1 53
: VOCABULARY      ( CREATE VOCAB WITH 'V-HEAD' AT VOC INTERSECT. *)_ 4 53
VOCABULARY FORTH IMMEDIATE      ( THE TRUNK VOCABULARY *)_ 9 53
: DEFINITIONS      ( SET THE CONTEXT ALSO AS CURRENT VOCAB *)_ 11 53
: (              ( SKIP INPUT TEXT UNTIL RIGHT PARENTHESIS *)_ 14 53
: QUIT          ( RESTART, INTERPRET FROM TERMINAL *)_ 2 54
: ABORT          ( WARM RESTART, INCLUDING REGISTERS *)_ 7 54
CODE COLD          ( COLD START, INITIALIZING USER AREA *)_ 1 55
CODE S->D          ( EXTEND SINGLE INTEGER TO DOUBLE *)_ 1 56
: +- 0< IF MINUS ENDF ;  ( APPLY SIGN TO NUMBER BENEATH *)_ 4 56
: D+-          ( APPLY SIGN TO DOUBLE NUMBER BENEATH *)_ 6 56
: ABS  DUP +- ;          ( LEAVE ABSOLUTE VALUE *)_ 9 56

```

| | | | | |
|---------------------|--|------------------------------------|----|-------|
| : DABS | DUP D+- ; | (DOUBLE INTEGER ABSOLUTE VALUE *) | 10 | 56 |
| : MIN | | (LEAVE SMALLER OF TWO NUMBERS *) | 12 | 56 |
| : MAX | | (LEAVE LARGET OF TWO NUMBERS *) | 14 | |
| : M* | (LEAVE SIGNED DOUBLE PRODUCT OF TWO SINGLE NUMBERS *) | | 1 | 57 |
| : M/ | (FROM SIGNED DOUBLE-3-2, SIGNED DIVISOR-1 *) | | 3 | 57 |
| | (LEAVE SIGNED REMAINDER-2, SIGNED QUOTIENT-1 *) | | 4 | 57 |
| : * | U* DROP ; | (SIGNED PRODUCT *) | 7 | 57 |
| : /MOD | >R S->D R> M/ ; | (LEAVE REM-2, QUOT-1 *) | 8 | 57 |
| : / | /MOD SWAP DROP ; | (LEAVE QUOTIENT *) | 9 | 57 |
| : MOD | /MOD DROP ; CR | (LEAVE REMAINDER *) | 10 | 57 |
| : */MOD | (TAKE RATION OF THREE NUMBERS, LEAVING | | 11 | 57 |
| | >R M* R> M/ ; | (REM-2, QUOTIENT-1 *) | 12 | 57 |
| : */ | */MOD SWAP DROP ; | (LEAVE RATIO OF THREE NUMBS *) | 13 | 57 |
| : M/MOD | (DOUBLE, SINGLE DIVISOR ... REMAINDER, DOUBLE | | 14 | 57 |
| FIRST VARIABLE USE | (NEXT BUFFER TO USE, STALEST | | 1 | 58 |
| FIRST VARIABLE PREV | (MOST RECENTLY REFERENCED BUFFER | | 2 | 58 |
| : +BUF | (ADVANCE ADDRESS-1 TO NEXT BUFFER. RETURNS FALSE | | 4 | 58 |
| | 84 (I.E. B/BUF+4) + DUP LIMIT = (IF AT PREV | | 5 | 58 |
| : UPDATE | (MARK THE BUFFER POINTED TO BY PREV AS ALTERED | | 8 | 58 |
| : EMPTY-BUFFERS | (CLEAR BLOCK BUFFERS; DON'T WRITE TO DISC | | 11 | 58 |
| : DRO | 0 OFFSET ! ; | (SELECT DRIVE #0 *) | 14 | 58 |
| : DR1 | 07D0 OFFSET ! ; --> | (SELECT DRIVE #1 *) | 15 | 58 |
| : BUFFER | (CONVERT BLOCK# TO STORAGE ADDRESS | | 1 | 59 |
| : BLOCK | (CONVERT BLOCK NUMBER TO ITS BUFFER ADDRESS | | 1 | 60 |
| : (LINE) | (LINE#, SCR#, ... BUFFER ADDRESS, 64 COUNT | | 2 | 61 |
| : .LINE | (LINE#, SCR#, ... PRINTED | | 6 | 61 |
| : MESSAGE | (PRINT LINE RELATIVE TO SCREEN #4 OF DRIVE 0 | | 9 | 61 |
| : LOAD | (INTERPRET SCREENS FROM DISC | | 2 | 62 |
| : --> | (CONTINUE INTERPRETATION ON NEXT SCREEN | | 6 | 62 |
| 6900 | CONSTANT DATA | (CONTROLLER PORT *) | 1 | 65 |
| 6901 | CONSTANT STATUS | (CONTROLLER PORT *) | 2 | 65 |
| : #HL | (CONVERT DECIMAL DIGIT FOR DISC CONTROLLER | | 5 | 65 |
| CODE D/CHAR | (TEST CHAR-1. EXIT TEST BOOL-2, NEW CHAR-1 | | 1 | 66 |
| : ?DISC | (UPON NAK SHOW ERR MSG, QUIT. ABSORBS TILL | | 7 | 66 |
| | 1 D/CHAR >R 0= | (EOT, EXCEPT FOR SOH *) | 8 | 66 |
| CODE BLOCK-WRITE | (SEND TO DISC FROM ADDRESS-2, COUNT-1 | | 1 | 67 |
| | 2 # LDA, SETUP JSR, | (WITH EOT AT END *) | 2 | 67 |
| CODE BLOCK-READ | (BUF.ADDR-1. EXIT AT 128 CHAR OR CONTROL | | 2 | 68 |
| | (C = I TO READ, 0 TO WRITE *) | | 3 | 69 |
| : R/W | (READ/WRITE DISC BLOCK | | 4 | 69 |
| | (BUFFER ADDRESS-3, BLOCK #-2, 1=READ 0=WRITE | | 5 | 69 |
| : ' | (FIND NEXT WORDS PFA; COMPILE IT, IF COMPILING | | 2 | 72 |
| : FORGET | (FOLLOWING WORD FROM CURRENT VOCABULARY | | 6 | 72 |
| : \ | (SKIP INTERPRETATION OF THE REMAINDER OF LINE | | 11 | 72 |
| : BACK | HERE - , ; | (RESOLVE BACKWARD BRANCH | 1 | 73 |
| : D.R | (DOUBLE INTEGER OUTPUT, RIGHT ALIGNED IN FIELD | | 1 | 76 |
| : D. | 0 D.R SPACE ; | (DOUBLE INTEGER OUTPUT | 5 | 76 |
| : .R | >R S->D R> D.R ; | (ALIGNED SINGLE INTEGER | 7 | 76 |
| : . | S->D D. ; | (SINGLE INTEGER OUTPUT | 9 | 76 |
| : ? | @ . ; | (PRINT CONTENTS OF MEMORY | 11 | 76 |
| : LIST | (LIST SCREEN BY NUMBER ON STACK | | 2 | 77 |
| : INDEX | (PRINT FIRST LINE OF EACH SCREEN FROM-2, TO-1 | | 7 | 77 |
| : TRIAD | (PRINT 3 SCREENS ON PAGE, CONTAINING # ON STACK | | 12 | 77 |
| : VLIST | (LIST CONTEXT VOCABULARY | | 2 | 78 |
| CREATE MON | (CALL MONITOR, SAVING RE-ENTRY TO FORTH | | 3 | 79 OK |

FORTH MODEL IMPLEMENTATION

This model is presented for the serious student as both an example of a large FORTH program and as a complete nucleus of FORTH. That is, it is sufficient to run and to continue to compile itself.

When compiled, the model requires about 2800 bytes of memory. An expanded version with formatted output and compiling aids would require about 4000 bytes. A 'full' implementation usually requires 6000 to 7000 bytes (including editor, assembler, and disk interface).

The following information consists of word definitions you will find in the CODE definitions. These are dependent on the micro-computer used, these being for the MOS Technology 5602.

Note that the notation in the CODE definitions is 'reverse Polish' as is all of FORTH. This means that the operand comes before the operator. Each equivalent of a 'line' of assembly code has a symbolic operand, then any address mode modifier, and finally the op-code mnemonic. (Note that words that generate actual machine code end in a ',' ; i.e. LDA,). Therefor:

| | |
|-------------|---------------------|
| BOT 1+ LDA, | in FORTH would be: |
| LDA 1,X | in usual assembler. |

And also:

| | |
|-----------------|---------------------|
| POINTER)Y STA, | in FORTH would be: |
| STA (POINTER),Y | in usual assembler. |

It takes a bit of getting used to, but reverse Polish assembler allows full use of FORTH in evaluation of expressions and the easy generation of the equivalent of macros.

GLOSSARY OF FORTH MODEL

| | |
|-------|---|
| IP | address of the Interpretive Pointer in zero-page. |
| W | address of the code field pointer in zero-page. |
| N | address of an 8 byte scratch area in zero-page. |
| XSAVE | address of a temporary register for X in zero-page. |
| UP | address of the User Pointer in zero-page. |

GLOSSARY OF FORTH MODEL, cont.

- .A specify accumulator address mode.
- # specify immediate mode for machine byte literals.
- ,X ,Y specify memory indexed address mode.
- X))Y specify indirect memory reference by a zero-page register.
- BOT address of low byte of a 16-bit stack item with ,X address mode. X register locates computation stack in zero-page, relative to address \$0000.
- BOT 1+ address of the high byte of the bottom stack item, with ,X mode preset.
- SEC and SEC 1+ address the second stack item as for BOT.
- TSX, move the return stack pointer (which is located in the CPU machine stack in page-one) to X register.
- R address of low byte of return stack with ,X mode preset.
- R n + address of the n-th byte of the return stack with ,X mode preset. Note that the low byte is at low memory, so 1+ gets the high byte, and 3 + gets the high byte of the second item of return stack.
- PUT address of routine to replace the present computation stack high byte from accumulator, and put from the machine stack one byte which replaces the present low stack byte; continue on to NEXT.
- PUSH address of routine to repeat PUT but creating a new bottom item on the computation stack.
- PUSHOA PUTOA address of routine to place the accumulator at the low stack byte, with the high byte zero. PUTOA over-writes, while PUSHOA creates new item.
- POP POPTWO address of routine to remove one or two 16-bit items from computation stack.
- BINARY address of routine to pop one item and PUT the accumulator (high) and ML stack (low) over what was second.
- SETUP address of a routine to move 16-bit items to zero-page. Item quantity is in accumulator.
- NEXT address of the inner-interpreter, to which all code routines must return. NEXT fetches indirectly referred to IP the next compiled FORTH word address. It then jumps indirectly to pointed machine code.

SCR # 6

0 (INPUT-OUTPUT, TIM WFR-780519)
1 CODE EMIT XSAVE STX, BOT 1+ LDA, 7F # AND,
2 72C6 JSR, XSAVE LDX, POP JMP,
3 CODE KEY XSAVE STX, BEGIN, BEGIN, 8 # LDX,
4 BEGIN, 6E02 LDA, .A LSR, CS END, 7320 JSR,
5 BEGIN, 731D JSR, 0 X) CMP, 0 X) CMP, 0 X) CMP,
6 0 X) CMP, 0 X) CMP, 6E02 LDA, .A LSR, PHP, TYA,
7 .A LSR, PLP, CS IF, 80 # ORA, THEN, TAY, DEX,
8 0= END, 731D JSR, FF # EOR, 7F # AND, 0= NOT END,
9 7F # CMP, 0= NOT END, XSAVE LDX, PUSHOA JMP,
10 CODE CR XSAVE STX, 728A JSR, XSAVE LDX, NEXT JMP,
11
12 CODE ?TERMINAL 1 # LDA, 6E02 BIT, 0= NOT IF,
13 BEGIN, 731D JSR, 6E02 BIT, 0= END, INY, THEN,
14 TYA, PUSHOA JMP,
15 DECIMAL ;S

SCR # 7

0 (INPUT-OUTPUT, APPLE WFR-780730)
1 CODE HOME FC58 JSR, NEXT JMP,
2 CODE SCROLL FC70 JSR, NEXT JMP,
3
4 HERE ' KEY 2 - ! (POINT KEY TO HERE)
5 FDOC JSR, 7F # AND, PUSHOA JMP,
6 HERE ' EMIT 2 - ! (POINT EMIT TO HERE)
7 BOT 1+ LDA, 80 # ORA, FDED JSR, POP JMP,
8 HERE ' CR 2 - ! (POINT CR TO HERE)
9 FD8E JSR, NEXT JMP,
10 HERE ' ?TERMINAL 2 - ! (POINT ?TERM TO HERE)
11 C000 BIT, 0<
12 IF, BEGIN, C010 BIT, C000 BIT, 0< NOT END, INY,
13 THEN, TYA, PUSHOA JMP,
14
15 DECIMAL ;S

SCR # 8

0 (INPUT-OUTPUT, SYM-1 WFR-781015)
1 HEX
2 CODE KEY 8A58 JSR, 7F # AND, PUSHOA JMP,
3
4 CODE EMIT BOT 1+ LDA, 8A47 JSR, POP JMP,
5
6 CODE CR 834D JSR, NEXT JMP,
7
8 CODE ?TERMINAL (BREAK TEST FOR ANY KEY)
9 8B3C JSR, CS
10 IF, BEGIN, 8B3C JSR, CS NOT END, INY, THEN,
11 TYA, PUSHOA JMP,
12
13
14
15 DECIMAL ;S

```

SCR # 12
0 ( COLD AND WARM ENTRY, USER PARAMETERS WFR-79APR29 )
1 ASSEMBLER OBJECT MEM HEX
2 NOP, HERE JMP, ( WORD ALIGNED VECTOR TO COLD )
3 NOP, HERE JMP, ( WORD ALIGNED VECTOR TO WARM )
4 0000 , 0001 , ( CPU, AND REVISION PARAMETERS )
5 0000 , ( TOPMOST WORD IN FORTH VOCABULARY )
6 7F , ( BACKSPACE CHARACTER )
7 3BA0 , ( INITIAL USER AREA )
8 009E , ( INITIAL TOP OF STACK )
9 01FF , ( INITIAL TOP OF RETURN STACK )
10 0100 , ( TERMINAL INPUT BUFFER )
11 001F , ( INITIAL NAME FIELD WIDTH )
12 0001 , ( INITIAL WARNING = 1 )
13 0200 , ( INITIAL FENCE )
14 0000 , ( COLD START VALUE FOR DP )
15 0000 , ( COLD START VALUE FOR VOC-LINK ) -->

```

```

SCR # 13
0 ( START OF NUCLEUS, LIT, PUSH, PUT, NEXT WFR-78DEC26 )
1 CODE LIT ( PUSH FOLLOWING LITERAL TO STACK *)
2 IP )Y LDA, PHA, IP INC, 0= IF, IP 1+ INC, THEN,
3 IP )Y LDA, IP INC, 0= IF, IP 1+ INC, THEN,
4 LABEL PUSH ( PUSH ACCUM AS HI-BYTE, ML STACK AS LO-BYTE *)
5 DEX, DEX,
6 LABEL PUT ( REPLACE BOTTOM WITH ACCUM. AND ML STACK *)
7 BOT 1+ STA, PLA, BOT STA,
8 LABEL NEXT ( EXECUTE NEXT FORTH ADDRESS, MOVING IP *)
9 1 # LDY, IP )Y LDA, W 1+ STA, ( FETCH CODE ADDRESS )
10 DEY, IP )Y LDA, W STA,
11 CLC, IP LDA, 2 # ADC, IP STA, ( MOVE IP AHEAD )
12 CS IF, IP 1+ INC, THEN,
13 W 1 - JMP, ( JUMP INDIR. VIA W THRU CODE FIELD TO CODE )
14
15 -->

```

```

SCR # 14
0 ( SETUP WFR-790225 )
1 HERE 2+ , ( MAKE SILENT WORD *)
2 IP )Y LDA, PHA, TYA, 'T LIT 0B + 0= NOT END,
3
4 LABEL SETUP ( MOVE # ITEMS FROM STACK TO 'N' AREA OF Z-PAGE *)
5 .A ASL, N 1 - STA,
6 BEGIN, BOT LDA, N ,Y STA, INX, INY,
7 N 1 - CPY, 0= END, 0 # LDY, RTS,
8
9 CODE EXECUTE ( EXECUTE A WORD BY ITS CODE FIELD *)
10 ( ADDRESS ON THE STACK *)
11 BOT LDA, W STA, BOT 1+ LDA, W 1+ STA,
12 INX, INX, W 1 - JMP,
13
14
15 -->

```

```

SCR # 15
0 ( BRANCH, OBRANCH W/16-BIT OFFSET WFR-79APR01 )
1 CODE BRANCH ( ADJUST IP BY IN-LINE 16 BIT LITERAL *)
2 CLC, IP )Y LDA, IP ADC, PHA,
3 INY, IP )Y LDA, IP 1+ ADC, IP 1+ STA,
4 PLA, IP STA, NEXT 2+ JMP,
5
6 CODE OBRANCH ( IF BOT IS ZERO, BRANCH FROM LITERAL *)
7 INX, INX, FE ,X LDA, FF ,X ORA,
8 ' BRANCH 0= NOT END, ( USE 'BRANCH' FOR FALSE )
9 LABEL BUMP: ( TRUE JUST MOVES IP 2 BYTES *)
10 CLC, IP LDA, 2 # ADC, IP STA,
11 CS IF, IP 1+ INC, THEN, NEXT JMP,
12
13 -->
14
15

```

```

SCR # 16
0 ( LOOP CONTROL WFR-79MAR20 )
1 CODE (LOOP) ( INCREMENT LOOP INDEX, LOOP UNTIL => LIMIT *)
2 XSAVE STX, TSX, R INC, 0= IF, R 1+ INC, THEN,
3 LABEL L1: CLC, R 2+ LDA, R SBC, R 3 + LDA, R 1+ SBC,
4 LABEL L2: XSAVE LDX, ( LIMIT-INDEX-1 )
5 .A ASL, ' BRANCH CS END, ( BRANCH UNTIL D7 SIGN=1 )
6 PLA, PLA, PLA, PLA, BUMP: JMP, ( ELSE EXIT LOOP )
7
8 CODE (+LOOP) ( INCREMENT INDEX BY STACK VALUE +/- *)
9 INX, INX, XSAVE STX, ( POP INCREMENT )
10 FF ,X LDA, PHA, PHA, FE ,X LDA, TSX, INX, INX,
11 CLC, R ADC, R STA, PLA, R 1 + ADC, R 1 + STA,
12 PLA, L1: 0< END, ( AS FOR POSITIVE INCREMENT )
13 CLC, R LDA, R 2+ SBC, ( INDEX-LIMIT-1 )
14 R 1+ LDA, R 3 + SBC, L2: JMP,
15 -->

```

```

SCR # 17
0 ( (DO- WFR-79MAR30 )
1
2 CODE (DO) ( MOVE TWO STACK ITEMS TO RETURN STACK *)
3 SEC 1+ LDA, PHA, SEC LDA, PHA,
4 BOT 1+ LDA, PHA, BOT LDA, PHA,
5
6 LABEL POPTWO INX, INX,
7 LABEL POP INX, INX, NEXT JMP,
8
9 CODE I ( COPY CURRENT LOOP INDEX TO STACK *)
10 ( THIS WILL LATER BE POINTED TO 'R' )
11
12 -->
13
14
15

```

```

SCR # 18
0 ( DIGIT WFR-781202 )
1 CODE DIGIT ( CONVERT ASCII CHAR-SECOND, WITH BASE-BOTTOM *)
2 ( IF OK RETURN DIGIT-SECOND, TRUE-BOTTOM; *)
3 ( OTHERWISE FALSE-BOTTOM. *)
4 SEC, SEC LDA, 30 # SBC,
5 0< NOT IF, 0A # CMP, ( ADJUST FOR ASCII LETTER )
6 0< NOT IF, SEC, 07 # SBC, 0A # CMP,
7 0< NOT IF,
8 SWAP ( AT COMPILE TIME ) THEN, BOT CMP, ( TO BASE )
9 0< IF, SEC STA, 1 # LDA,
10 PHA, TYA, PUT JMP,
11 ( STORE RESULT SECOND AND RETURN TRUE )
12 THEN, THEN, THEN, ( CONVERSION FAILED )
13 TYA, PHA, INX, INX, PUT JMP, ( LEAVE BOOLEAN FALSE )
14
15 -->

```

```

SCR # 19
0 ( FIND FOR VARIABLE LENGTH NAMES WFR-790225 )
1 CODE (FIND) ( HERE, NFA ... PFA, LEN BYTE, TRUE; ELSE FALSE *)
2 2 # LDA, SETUP JSR, XSAVE STX,
3 BEGIN, 0 # LDY, N )Y LDA, N 2+ )Y EOR, 3F # AND, 0=
4 IF, ( GOOD ) BEGIN, INY, N )Y LDA, N 2+ )Y EOR, .A ASL, 0=
5 IF, ( STILL GOOD ) SWAP CS ( LOOP TILL D7 SET )
6 END, XSAVE LDX, DEX, DEX, DEX, DEX, CLC,
7 TYA, 5 # ADC, N ADC, SEC STA, 0 # LDY,
8 TYA, N 1+ ADC, SEC 1+ STA, BOT 1+ STY,
9 N )Y LDA, BOT STA, 1 # LDA, PHA, PUSH JMP, ( FALSE )
10 THEN, CS NOT ( AT LAST CHAR? ) IF, SWAP THEN,
11 BEGIN, INY, N )Y LDA, 0< END, ( TO LAST CHAR )
12 THEN, INY, ( TO LINK ) N )Y LDA, TAX, INY,
13 N )Y LDA, N 1+ STA, N STX, N ORA, ( 0 LINK ? )
14 0= END, ( LOOP FOR ANOTHER NAME )
15 XSAVE LDX, 0 # LDA, PHA, PUSH JMP, ( FALSE ) -->

```

```

SCR # 20
0 ( ENCLOSE WFR-780926 )
1 CODE ENCLOSE ( ENTER WITH ADDRESS-2, DELIM-1. RETURN WITH *)
2 ( ADDR-4, AND OFFSET TO FIRST CH-3, END WORD-2, NEXT CH-1 *)
3 2 # LDA, SETUP JSR, TXA, SEC, 8 # SBC, TAX,
4 SEC 1+ STY, BOT 1+ STY, ( CLEAR HI BYTES ) DEY,
5 BEGIN, INY, N 2+ )Y LDA, ( FETCH CHAR )
6 N CMP, 0= NOT END, ( STEP OVER LEADING DELIMITERS )
7 BOT 4 + STY, ( SAVE OFFSET TO FIRST CHAR )
8 BEGIN, N 2+ )Y LDA, 0=
9 IF, ( NULL ) SEC STY, ( IN EW ) BOT STY, ( IN NC )
10 TYA, BOT 4 + CMP, 0=
11 IF, ( Y=FC ) SEC INC, ( BUMP EW ) THEN, NEXT JMP,
12 THEN, SEC STY, ( IN EW ) INY, N CMP, ( DELIM ? )
13 0= END, ( IS DELIM ) BOT STY, ( IN NC ) NEXT JMP,
14
15 -->

```



```

SCR # 21
0 (  TERMINAL VECTORS                                WFR-79MAR30 )
1 (  THESE WORDS ARE CREATED WITH NO EXECUTION CODE, YET.      )
2 (  THEIR CODE FIELDS WILL BE FILLED WITH THE ADDRESS OF THEIR )
3 (  INSTALLATION SPECIFIC CODE.                                )
4
5 CODE EMIT                ( PRINT ASCII VALUE ON BOTTOM OF STACK *)
6
7 CODE KEY                  ( ACCEPT ONE TERMINAL CHARACTER TO THE STACK *)
8
9 CODE ?TERMINAL            ( 'BREAK' LEAVES 1 ON STACK; OTHERWISE 0 *)
10
11 CODE CR                  ( EXECUTE CAR. RETURN, LINE FEED ON TERMINAL *)
12
13 -->
14
15

```

```

SCR # 22
0 (  CMOVE,                                WFR-79MAR20 )
1 CODE CMOVE    ( WITHIN MEMORY; ENTER W/  FROM-3, TO-2, QUAN-1 *)
2   3 # LDA,  SETUP JSR,      ( MOVE 3 ITEMS TO 'N' AREA )
3   BEGIN,  BEGIN,  N CPY,  0= ( DECREMENT BYTE COUNTER AT 'N' )
4           IF,  N 1+ DEC,  0< ( EXIT WHEN DONE )
5           IF,  NEXT JMP,  THEN,  THEN,
6           N 4 + )Y LDA,  N 2+ )Y STA,  INY,  0=
7           END,          ( LOOP TILL Y WRAPS, 22 CYCLES/BYTE )
8           N 5 + INC,  N 3 + INC,      ( BUMP HI BYTES OF POINTERS )
9           JMP,  ( BACK TO FIRST 'BEGIN' )
10
11 -->
12
13
14
15

```

```

SCR # 23
0 (  U*,  UNSIGNED MULTIPLY FOR 16 BITS                                WFR-79APR08 )
1 CODE U*      ( 16 BIT MULTIPLICAND-2, 16 BIT MULTIPLIER-1 *)
2              ( 32 BIT UNSIGNED PRODUCT: LO WORD-2, HI WORD-1 *)
3   SEC      LDA,  N      STA,  SEC      STY,
4   SEC 1+ LDA,  N 1+ STA,  SEC 1+ STY,  ( MULTIPLICAND TO N )
5   10 # LDY,
6   BEGIN,  BOT 2+ ASL,  BOT 3 + ROL,  BOT ROL,  BOT 1+ ROL,
7           ( DOUBLE PRODUCT WHILE SAMPLING D15 OF MULT )
8           CS IF, ( SET ) CLC,
9           ( ADD MULTIPLICAND TO PARTIAL PRODUCT LOW 24 BITS )
10          N      LDA,  BOT 2 + ADC,  BOT 2 + STA,
11          N 1+ LDA,  BOT 3 + ADC,  BOT 3 + STA,
12          0 # LDA,  BOT      ADC,  BOT      STA,
13          THEN,  DEY,  0=
14          END,      NEXT JMP,
15 -->

```

```

SCR # 24
0 ( U/, UNSIGNED DIVIDE FOR 31 BITS WFR-79APR29 )
1 CODE U/ ( 31 BIT DIVIDEND-2, -3, 16 BIT DIVISOR-1 *)
2 ( 16 BIT REMAINDER-2, 16 BIT QUOTIENT-1 *)
3 SEC 2 + LDA, SEC LDY, SEC 2 + STY, .A ASL, SEC STA,
4 SEC 3 + LDA, SEC 1+ LDY, SEC 3 + STY, .A ROL, SEC 1+ STA,
5 10 # LDA, N STA,
6 BEGIN, SEC 2 + ROL, SEC 3 + ROL, SEC,
7 SEC 2 + LDA, BOT SBC, TAY,
8 SEC 3 + LDA, BOT 1+ SBC,
9 CS IF, SEC 2+ STY, SEC 3 + STA, THEN,
10 SEC ROL, SEC 1+ ROL,
11 N DEC, 0=
12 END, POP JMP,
13 -->
14
15

```

```

SCR # 25
0 ( LOGICALS WFR-79APR20 )
1
2 CODE AND ( LOGICAL BITWISE AND OF BOTTOM TWO ITEMS *)
3 BOT LDA, SEC AND, PHA,
4 BOT 1+ LDA, SEC 1+ AND, INX, INX, PUT JMP,
5
6 CODE OR ( LOGICAL BITWISE 'OR' OF BOTTOM TWO ITEMS *)
7 BOT LDA, SEC ORA, PHA,
8 BOT 1+ LDA, SEC 1 + ORA, INX, INX, PUT JMP,
9
10 CODE XOR ( LOGICAL 'EXCLUSIVE-OR' OF BOTTOM TWO ITEMS *)
11 BOT LDA, SEC EOR, PHA,
12 BOT 1+ LDA, SEC 1+ EOR, INX, INX, PUT JMP,
13
14 -->
15

```

```

SCR # 26
0 ( STACK INITIALIZATION WFR-79MAR30 )
1 CODE SP@ ( FETCH STACK POINTER TO STACK *)
2 TXA,
3 LABEL PUSH0A PHA, 0 # LDA, PUSH JMP,
4
5 CODE SP! ( LOAD SP FROM 'S0' *)
6 06 # LDY, UP )Y LDA, TAX, NEXT JMP,
7
8 CODE RP! ( LOAD RP FROM R0 *)
9 XSAVE STX, 08 # LDY, UP )Y LDA, TAX, TXS,
10 XSAVE LDX, NEXT JMP,
11
12 CODE ;S ( RESTORE IP REGISTER FROM RETURN STACK *)
13 PLA, IP STA, PLA, IP 1+ STA, NEXT JMP,
14
15 -->

```

SCR # 27

```

0 ( RETURN STACK WORDS WFR-79MAR29 )
1 CODE LEAVE ( FORCE EXIT OF DO-LOOP BY SETTING LIMIT *)
2 XSAVE STX, TSX, R LDA, R 2+ STA, ( TO INDEX *)
3 R 1+ LDA, R 3 + STA, XSAVE LDX, NEXT JMP,
4
5 CODE >R ( MOVE FROM COMP. STACK TO RETURN STACK *)
6 BOT 1+ LDA, PHA, BOT LDA, PHA, INX, INX, NEXT JMP,
7
8 CODE R> ( MOVE FROM RETURN STACK TO COMP. STACK *)
9 DEX, DEX, PLA, BOT STA, PLA, BOT 1+ STA, NEXT JMP,
10
11 CODE R ( COPY THE BOTTOM OF RETURN STACK TO COMP. STACK *)
12 XSAVE STX, TSX, R LDA, PHA, R 1+ LDA,
13 XSAVE LDX, PUSH JMP,
14 R -2 BYTE.IN I !
15 -->

```

SCR # 28

```

0 ( TESTS AND LOGICALS WFR-79MAR19 )
1
2 CODE 0= ( REVERSE LOGICAL STATE OF BOTTOM OF STACK *)
3 BOT LDA, BOT 1+ ORA, BOT 1+ STY,
4 0= IF, INY, THEN, BOT STY, NEXT JMP,
5
6 CODE 0< ( LEAVE TRUE IF NEGATIVE; OTHERWISE FALSE *)
7 BOT 1+ ASL, TYA, .A ROL, BOT 1+ STY, BOT STA, NEXT JMP,
8
9
10 -->
11
12
13
14
15

```

SCR # 29

```

0 ( MATH WFR-79MAR19 )
1 CODE + ( LEAVE THE SUM OF THE BOTTOM TWO STACK ITEMS *)
2 CLC, BOT LDA, SEC ADC, SEC STA, BOT 1+ LDA, SEC 1+ ADC,
3 SEC 1+ STA, INX, INX, NEXT JMP,
4 CODE D+ ( ADD TWO DOUBLE INTEGERS, LEAVING DOUBLE *)
5 CLC, BOT 2 + LDA, BOT 6 + ADC, BOT 6 + STA,
6 BOT 3 + LDA, BOT 7 + ADC, BOT 7 + STA,
7 BOT LDA, BOT 4 + ADC, BOT 4 + STA,
8 BOT 1 + LDA, BOT 5 + ADC, BOT 5 + STA, POPTWO JMP,
9 CODE MINUS ( TWOS COMPLEMENT OF BOTTOM SINGLE NUMBER *)
10 SEC, TYA, BOT SBC, BOT STA,
11 TYA, BOT 1+ SBC, BOT 1+ STA, NEXT JMP,
12 CODE DMINUS ( TWOS COMPLEMENT OF BOTTOM DOUBLE NUMBER *)
13 SEC, TYA, BOT 2 + SBC, BOT 2 + STA,
14 TYA, BOT 3 + SBC, BOT 3 + STA,
15 1 BYTE.IN MINUS JMP, -->

```

```

SCR # 30
0 ( STACK MANIPULATION WFR-79MAR29 )
1 CODE OVER ( DUPLICATE SECOND ITEM AS NEW BOTTOM *)
2 SEC LDA, PHA, SEC 1+ LDA, PUSH JMP,
3
4 CODE DROP ( DROP BOTTOM STACK ITEM *)
5 POP -2 BYTE.IN DROP ! ( C.F. VECTORS DIRECTLY TO 'POP' )
6
7 CODE SWAP ( EXCHANGE BOTTOM AND SECOND ITEMS ON STACK *)
8 SEC LDA, PHA, BOT LDA, SEC STA,
9 SEC 1+ LDA, BOT 1+ LDY, SEC 1+ STY, PUT JMP,
10
11 CODE DUP ( DUPLICATE BOTTOM ITEM ON STACK *)
12 BOT LDA, PHA, BOT 1+ LDA, PUSH JMP,
13
14 -->
15

```

```

SCR # 31
0 ( MEMORY INCREMENT, WFR-79MAR30 )
1
2 CODE +! ( ADD SECOND TO MEMORY 16 BITS ADDRESSED BY BOTTOM *)
3 CLC, BOT X) LDA, SEC ADC, BOT X) STA,
4 BOT INC, 0= IF, BOT 1+ INC, THEN,
5 BOT X) LDA, SEC 1+ ADC, BOT X) STA, POPTWO JMP,
6
7 CODE TOGGLE ( BYTE AT ADDRESS-2, BIT PATTERN-1 ... *)
8 SEC X) LDA, BOT EOR, SEC X) STA, POPTWO JMP,
9
10 -->
11
12
13
14
15

```

```

SCR # 32
0 ( MEMORY FETCH AND STORE WFR-781202 )
1 CODE @ ( REPLACE STACK ADDRESS WITH 16 BIT *)
2 BOT X) LDA, PHA, ( CONTENTS OF THAT ADDRESS *)
3 BOT INC, 0= IF, BOT 1+ INC, THEN, BOT X) LDA, PUT JMP,
4
5 CODE C@ ( REPLACE STACK ADDRESS WITH POINTED 8 BIT BYTE *)
6 BOT X) LDA, BOT STA, BOT 1+ STY, NEXT JMP,
7
8 CODE ! ( STORE SECOND AT 16 BITS ADDRESSED BY BOTTOM *)
9 SEC LDA, BOT X) STA, BOT INC, 0= IF, BOT 1+ INC, THEN,
10 SEC 1+ LDA, BOT X) STA, POPTWO JMP,
11
12 CODE C! ( STORE SECOND AT BYTE ADDRESSED BY BOTTOM *)
13 SEC LDA, BOT X) STA, POPTWO JMP,
14
15 DECIMAL ;S

```

```

SCR # 33
0 (  :,  ;,                                     WFR-79MAR30 )
1
2 : :                ( CREATE NEW COLON-DEFINITION UNTIL ';' *)
3                ?EXEC !CSP CURRENT @           CONTEXT !
4                CREATE ] ;CODE IMMEDIATE
5                IP 1+ LDA, PHA, IP LDA, PHA, CLC, W LDA, 2 # ADC,
6                IP STA, TYA, W 1+ ADC, IP 1+ STA, NEXT JMP,
7
8
9 : ;                ( TERMINATE COLON-DEFINITION *)
10                ?CSP COMPILE ;S
11                SMUDGE [ ; IMMEDIATE
12
13
14
15 -->

```

```

SCR # 34
0 ( CONSTANT, VARIABLE, USER                     WFR-79MAR30 )
1 : CONSTANT                ( WORD WHICH LATER CREATES CONSTANTS *)
2                CREATE SMUDGE , ;CODE
3                2 # LDY, W )Y LDA, PHA, INY, W )Y LDA, PUSH JMP,
4
5 : VARIABLE                ( WORD WHICH LATER CREATES VARIABLES *)
6                CONSTANT ;CODE
7                CLC, W LDA, 2 # ADC, PHA, TYA, W 1+ ADC, PUSH JMP,
8
9
10 : USER                ( CREATE USER VARIABLE *)
11                CONSTANT ;CODE
12                2 # LDY, CLC, W )Y LDA, UP ADC, PHA,
13                0 # LDA, UP 1+ ADC, PUSH JMP,
14
15 -->

```

```

SCR # 35
0 ( DEFINED CONSTANTS                                     WFR-78MAR22 )
1 HEX
2 00 CONSTANT 0          01 CONSTANT 1
3 02 CONSTANT 2          03 CONSTANT 3
4 20 CONSTANT BL                ( ASCII BLANK *)
5 40 CONSTANT C/L              ( TEXT CHARACTERS PER LINE *)
6
7 3BE0 CONSTANT FIRST      ( FIRST BYTE RESERVED FOR BUFFERS *)
8 4000 CONSTANT LIMIT      ( JUST BEYOND TOP OF RAM *)
9 80 CONSTANT B/BUF        ( BYTES PER DISC BUFFER *)
10 8 CONSTANT B/SCR      ( BLOCKS PER SCREEN = 1024 B/BUF / *)
11
12                00 +ORIGIN
13 : +ORIGIN LITERAL + ; ( LEAVES ADDRESS RELATIVE TO ORIGIN *)
14 -->
15

```

```

SCR # 36
0 ( USER VARIABLES WFR-78APR29 )
1 HEX ( 0 THRU 5 RESERVED, REFERENCED TO $00A0 *)
2 ( 06 USER SO ) ( TOP OF EMPTY COMPUTATION STACK *)
3 ( 08 USER RO ) ( TOP OF EMPTY RETURN STACK *)
4 0A USER TIB ( TERMINAL INPUT BUFFER *)
5 0C USER WIDTH ( MAXIMUM NAME FIELD WIDTH *)
6 0E USER WARNING ( CONTROL WARNING MODES *)
7 10 USER FENCE ( BARRIER FOR FORGETTING *)
8 12 USER DP ( DICTIONARY POINTER *)
9 14 USER VOC-LINK ( TO NEWEST VOCABULARY *)
10 16 USER BLK ( INTERPRETATION BLOCK *)
11 18 USER IN ( OFFSET INTO SOURCE TEXT *)
12 1A USER OUT ( DISPLAY CURSOR POSITION *)
13 1C USER SCR ( EDITING SCREEN *)
14 -->
15

```

```

SCR # 37
0 ( USER VARIABLES, CONT. WFR-79APR29 )
1 1E USER OFFSET ( POSSIBLY TO OTHER DRIVES *)
2 20 USER CONTEXT ( VOCABULARY FIRST SEARCHED *)
3 22 USER CURRENT ( SEARCHED SECOND, COMPILED INTO *)
4 24 USER STATE ( COMPILATION STATE *)
5 26 USER BASE ( FOR NUMERIC INPUT-OUTPUT *)
6 28 USER DPL ( DECIMAL POINT LOCATION *)
7 2A USER FLD ( OUTPUT FIELD WIDTH *)
8 2C USER CSP ( CHECK STACK POSITION *)
9 2E USER R# ( EDITING CURSOR POSITION *)
10 30 USER HLD ( POINTS TO LAST CHARACTER HELD IN PAD *)
11 -->
12
13
14
15

```

```

SCR # 38
0 ( HI-LEVEL MISC. WFR-79APR29 )
1 : 1+ 1 + ; ( INCREMENT STACK NUMBER BY ONE *)
2 : 2+ 2 + ; ( INCREMENT STACK NUMBER BY TWO *)
3 : HERE DP @ ; ( FETCH NEXT FREE ADDRESS IN DICT. *)
4 : ALLOT DP +! ; ( MOVE DICT. POINTER AHEAD *)
5 : , HERE ! 2 ALLOT ; ( ENTER STACK NUMBER TO DICT. *)
6 : C, HERE C! 1 ALLOT ; ( ENTER STACK BYTE TO DICT. *)
7 : - MINUS + ; ( LEAVE DIFF. SEC - BOTTOM *)
8 : = - 0= ; ( LEAVE BOOLEAN OF EQUALITY *)
9 : < - 0< ; ( LEAVE BOOLEAN OF SEC < BOT *)
10 : > SWAP < ; ( LEAVE BOOLEAN OF SEC > BOT *)
11 : ROT >R SWAP R> SWAP ; ( ROTATE THIRD TO BOTTOM *)
12 : SPACE BL EMIT ; ( PRINT BLANK ON TERMINAL *)
13 : -DUP DUP IF DUP ENDIF ; ( DUPLICATE NON-ZERO *)
14 -->
15

```

```

SCR # 39
0 ( VARIABLE LENGTH NAME SUPPORT WFR-79MAR30 )
1 : TRAVERSE ( MOVE ACROSS NAME FIELD *)
2 ( ADDRESS-2, DIRECTION-1, I.E. -1=R TO L, +1=L TO R *)
3 SWAP
4 BEGIN OVER + 7F OVER C@ < UNTIL SWAP DROP ;
5
6 : LATEST CURRENT @ @ ; ( NFA OF LATEST WORD *)
7
8
9 ( FOLLOWING HAVE LITERALS DEPENDENT ON COMPUTER WORD SIZE )
10
11 : LFA 4 - ; ( CONVERT A WORDS PFA TO LFA *)
12 : CFA 2 - ; ( CONVERT A WORDS PFA TO CFA *)
13 : NFA 5 - -1 TRAVERSE ; ( CONVERT A WORDS PFA TO NFA *)
14 : PFA 1 TRAVERSE 5 + ; ( CONVERT A WORDS NFA TO PFA *)
15 -->

```

```

SCR # 40
0 ( ERROR PROCEDURES, PER SHIRA WFR-79MAR23 )
1 : !CSP SP@ CSP ! ; ( SAVE STACK POSITION IN 'CSP' *)
2
3 : ?ERROR ( BOOLEAN-2, ERROR TYPE-1, WARN FOR TRUE *)
4 SWAP IF ERROR ELSE DROP ENDIF ;
5
6 : ?COMP STATE @ 0= 11 ?ERROR ; ( ERROR IF NOT COMPILING *)
7
8 : ?EXEC STATE @ 12 ?ERROR ; ( ERROR IF NOT EXECUTING *)
9
10 : ?PAIRS - 13 ?ERROR ; ( VERIFY STACK VALUES ARE PAIRED *)
11
12 : ?CSP SP@ CSP @ - 14 ?ERROR ; ( VERIFY STACK POSITION *)
13
14 : ?LOADING ( VERIFY LOADING FROM DISC *)
15 BLK @ 0= 16 ?ERROR ; -->

```

```

SCR # 41
0 ( COMPILE, SMUDGE, HEX, DECIMAL WFR-79APR20 )
1
2 : COMPILE ( COMPILE THE EXECUTION ADDRESS FOLLOWING *)
3 ?COMP R> DUP 2+ >R @ , ;
4
5 : [ 0 STATE ! ; IMMEDIATE ( STOP COMPILATION *)
6
7 : ] CO STATE ! ; ( ENTER COMPILATION STATE *)
8
9 : SMUDGE LATEST 20 TOGGLE ; ( ALTER LATEST WORD NAME *)
10
11 : HEX 10 BASE ! ; ( MAKE HEX THE IN-OUT BASE *)
12
13 : DECIMAL 0A BASE ! ; ( MAKE DECIMAL THE IN-OUT BASE *)
14 -->
15

```

```

SCR # 42
0 ( ;CODE WFR-79APR20 )
1
2 : ( ;CODE) ( WRITE CODE FIELD POINTING TO CALLING ADDRESS *)
3 R> LATEST PFA CFA ! ;
4
5
6 : ;CODE ( TERMINATE A NEW DEFINING WORD *)
7 ?CSP COMPILE ( ;CODE)
8 [COMPILE] [ SMUDGE ; IMMEDIATE
9 -->
10
11
12
13
14
15

```

```

SCR # 43
0 ( <BUILD, DOES> WFR-79MAR20 )
1
2 : <BUILDS 0 CONSTANT ; ( CREATE HEADER FOR 'DOES' WORD *)
3
4 : DOES> ( REWRITE PFA WITH CALLING HI-LEVEL ADDRESS *)
5 ( REWRITE CFA WITH 'DOES' CODE *)
6 R> LATEST PFA ! ;CODE
7 IP 1+ LDA, PHA, IP LDA, PHA, ( BEGIN FORTH NESTING )
8 2 # LDY, W )Y LDA, IP STA, ( FETCH FIRST PARAM )
9 INY, W )Y LDA, IP 1+ STA, ( AS NEXT INTERP. PTR )
10 CLC, W LDA, 4 # ADC, PHA, ( PUSH ADDRESS OF PARAMS )
11 W 1+ LDA, 00 # ADC, PUSH JMP,
12
13 -->
14
15

```

```

SCR # 44
0 ( TEXT OUTPUTS WFR-79APR02 )
1 : COUNT DUP 1+ SWAP C@ ; ( LEAVE TEXT ADDR. CHAR. COUNT *)
2 : TYPE ( TYPE STRING FROM ADDRESS-2, CHAR.COUNT-1 *)
3 -DUP IF OVER + SWAP
4 DO I C@ EMIT LOOP ELSE DROP ENDIF ;
5 : -TRAILING ( ADJUST CHAR. COUNT TO DROP TRAILING BLANKS *)
6 DUP 0 DO OVER OVER + 1 - C@
7 BL - IF LEAVE ELSE 1 - ENDIF LOOP ;
8 : (." ) ( TYPE IN-LINE STRING, ADJUSTING RETURN *)
9 R COUNT DUP 1+ R> + >R TYPE ;
10
11
12 : ." 22 STATE @ ( COMPILE OR PRINT QUOTED STRING *)
13 IF COMPILE (." ) WORD HERE C@ 1+ ALLOT
14 ELSE WORD HERE COUNT TYPE ENDIF ;
15 IMMEDIATE -->

```



```

SCR # 45
0 ( TERMINAL INPUT WFR-79APR29 )
1
2 : EXPECT ( TERMINAL INPUT MEMORY-2, CHAR LIMIT-1 *)
3 OVER + OVER DO KEY DUP OE +ORIGIN ( BS ) @ =
4 IF DROP 08 OVER I = DUP R> 2 - + >R -
5 ELSE ( NOT BS ) DUP OD =
6 IF ( RET ) LEAVE DROP BL 0 ELSE DUP ENDIF
7 I C! 0 I 1+ !
8 ENDIF EMIT LOOP DROP ;
9 : QUERY TIB @ 50 EXPECT 0 IN ! ;
10 8081 HERE
11 : X BLK @ ( END-OF-TEXT IS NULL *)
12 IF ( DISC ) 1 BLK +! 0 IN ! BLK @ 7 AND 0=
13 IF ( SCR END ) ?EXEC R> DROP ENDIF ( disc dependent )
14 ELSE ( TERMINAL ) R> DROP
15 ENDIF ; ! IMMEDIATE -->

```

```

SCR # 46
0 ( FILL, ERASE, BLANKS, HOLD, PAD WFR-79APR02 )
1 : FILL ( FILL MEMORY BEGIN-3, QUAN-2, BYTE-1 *)
2 SWAP >R OVER C! DUP 1+ R> 1 - CMOVE ;
3
4 : ERASE ( FILL MEMORY WITH ZEROS BEGIN-2, QUAN-1 *)
5 0 FILL ;
6
7 : BLANKS ( FILL WITH BLANKS BEGIN-2, QUAN-1 *)
8 BL FILL ;
9
10 : HOLD ( HOLD CHARACTER IN PAD *)
11 -1 HLD +! HLD @ C! ;
12
13 : PAD HERE 44 + ; ( PAD IS 68 BYTES ABOVE HERE *)
14 ( DOWNWARD HAS NUMERIC OUTPUTS; UPWARD MAY HOLD TEXT *)
15 -->

```

```

SCR # 47
0 ( WORD, WFR-79APR02 )
1 : WORD ( ENTER WITH DELIMITER, MOVE STRING TO 'HERE' *)
2 BLK @ IF BLK @ BLOCK ELSE TIB @ ENDIF
3 IN @ + SWAP ( ADDRESS-2, DELIMITER-1 )
4 ENCLOSE ( ADDRESS-4, START-3, END-2, TOTAL COUNT-1 )
5 HERE 22 BLANKS ( PREPARE FIELD OF 34 BLANKS )
6 IN +! ( STEP OVER THIS STRING )
7 OVER - >R ( SAVE CHAR COUNT )
8 R HERE C! ( LENGTH STORED FIRST )
9 + HERE 1+
10 R> CMOVE ; ( MOVE STRING FROM BUFFER TO HERE+1 )
11
12
13
14
15 -->

```

```

SCR # 48
0 ( (NUMBER-, NUMBER, -FIND, WFR-79APR29 )
1 : (NUMBER) ( CONVERT DOUBLE NUMBER, LEAVING UNCONV. ADDR. *)
2 BEGIN 1+ DUP >R C@ BASE @ DIGIT
3 WHILE SWAP BASE @ U* DROP ROT BASE @ U* D+
4 DPL @ 1+ IF 1 DPL +! ENDIF R> REPEAT R> ;
5
6 : NUMBER ( ENTER W/ STRING ADDR. LEAVE DOUBLE NUMBER *)
7 0 0 ROT DUP 1+ C@ 2D = DUP >R + -1
8 BEGIN DPL ! (NUMBER) DUP C@ BL -
9 WHILE DUP C@ 2E - 0 ?ERROR 0 REPEAT
10 DROP R> IF DMINUS ENDIF ;
11
12 : -FIND ( RETURN PFA-3, LEN BYTE-2, TRUE-1; ELSE FALSE *)
13 BL WORD HERE CONTEXT @ @ (FIND)
14 DUP 0= IF DROP HERE LATEST (FIND) ENDIF ;
15 -->

```

```

SCR # 49
0 ( ERROR HANDLER WFR-79APR20 )
1
2 : (ABORT) ABORT ; ( USER ALTERABLE ERROR ABORT *)
3
4 : ERROR ( WARNING: -1=ABORT, 0=NO DISC, 1=DISC *)
5 WARNING @ 0< ( PRINT TEXT LINE REL TO SCR #4 *)
6 IF (ABORT) ENDIF HERE COUNT TYPE ." ? "
7 MESSAGE SP! IN @ BLK @ QUIT ;
8
9 : ID. ( PRINT NAME FIELD FROM ITS HEADER ADDRESS *)
10 PAD 020 5F FILL DUP PFA LFA OVER -
11 PAD SWAP CMOVE PAD COUNT 01F AND TYPE SPACE ;
12 -->
13
14
15

```

```

SCR # 50
0 ( CREATE WFR-79APR28 )
1
2 : CREATE ( A SMUDGED CODE HEADER TO PARAM FIELD *)
3 ( WARNING IF DUPLICATING A CURRENT NAME *)
4 TIB HERE OAO + < 2 ?ERROR ( 6502 only )
5 -FIND ( CHECK IF UNIQUE IN CURRENT AND CONTEXT )
6 IF ( WARN USER ) DROP NFA ID.
7 4 MESSAGE SPACE ENDIF
8 HERE DUP C@ WIDTH @ MIN 1+ ALLOT
9 DP C@ OFD = ALLOT ( 6502 only )
10 DUP AO TOGGLE HERE 1 - 80 TOGGLE ( DELIMIT BITS )
11 LATEST , CURRENT @ !
12 HERE 2+ , ;
13 -->
14
15

```

```

SCR # 51
0 ( LITERAL, DLITERAL, [COMPILE], ?STACK          WFR-79APR29 )
1
2 : [COMPILE]          ( FORCE COMPILATION OF AN IMMEDIATE WORD *)
3   -FIND  0=  0  ?ERROR DROP CFA , ; IMMEDIATE
4
5 : LITERAL              ( IF COMPILING, CREATE LITERAL *)
6   STATE @ IF COMPILE LIT , ENDIF ; IMMEDIATE
7
8 : DLITERAL              ( IF COMPILING, CREATE DOUBLE LITERAL *)
9   STATE @ IF SWAP [COMPILE] LITERAL
10                      [COMPILE] LITERAL ENDIF ; IMMEDIATE
11
12 ( FOLLOWING DEFINITION IS INSTALLATION DEPENDENT )
13 : ?STACK              ( QUESTION UPON OVER OR UNDERFLOW OF STACK *)
14   09E SP@ < 1 ?ERROR SP@ 020 < 7 ?ERROR ;
15 -->

```

```

SCR # 52
0 ( INTERPRET,          WFR-79APR18 )
1
2 : INTERPRET          ( INTERPRET OR COMPILE SOURCE TEXT INPUT WORDS *)
3   BEGIN -FIND
4     IF ( FOUND ) STATE @ <
5       IF CFA , ELSE CFA EXECUTE ENDIF ?STACK
6       ELSE HERE NUMBER DPL @ 1+
7       IF [COMPILE] DLITERAL
8         ELSE DROP [COMPILE] LITERAL ENDIF ?STACK
9     ENDIF AGAIN ;
10 -->
11
12
13
14
15

```

```

SCR # 53
0 ( IMMEDIATE, VOCAB, DEFIN, FORTH, ( DJK-WFR-79APR29 )
1 : IMMEDIATE          ( TOGGLE PREC. BIT OF LATEST CURRENT WORD *)
2   LATEST 40 TOGGLE ;
3
4 : VOCABULARY          ( CREATE VOCAB WITH 'V-HEAD' AT VOC INTERSECT. *)
5   <BUILDS A081 , CURRENT @ CFA ,
6   HERE VOC-LINK @ , VOC-LINK !
7   DOES> 2+ CONTEXT ! ;
8
9 VOCABULARY FORTH      IMMEDIATE          ( THE TRUNK VOCABULARY *)
10
11 : DEFINITIONS          ( SET THE CONTEXT ALSO AS CURRENT VOCAB *)
12   CONTEXT @ CURRENT ! ;
13
14 : (                    ( SKIP INPUT TEXT UNTIL RIGHT PARENTHESIS *)
15   29 WORD ; IMMEDIATE -->

```

SCR # 54

```
0 ( QUIT, ABORT                                     WFR-79MAR30 )
1
2 : QUIT                                           ( RESTART, INTERPRET FROM TERMINAL *)
3     0 BLK ! [COMPILE] [
4     BEGIN RP! CR QUERY INTERPRET
5         STATE @ 0= IF ." OK" ENDIF AGAIN ;
6
7 : ABORT                                           ( WARM RESTART, INCLUDING REGISTERS *)
8     SP! DECIMAL                                DRO
9     CR ." FORTH-65 V 4.0"
10    [COMPILE] FORTH DEFINITIONS QUIT ;
11
12
13 -->
14
15
```

SCR # 55

```
0 ( COLD START                                     WFR-79APR29 )
1 CODE COLD                                       ( COLD START, INITIALIZING USER AREA *)
2     HERE 02 +ORIGIN ! ( POINT COLD ENTRY TO HERE )
3         0C +ORIGIN LDA, 'T FORTH 4 + STA, ( FORTH VOCAB. )
4         0D +ORIGIN LDA, 'T FORTH 5 + STA,
5         15 # LDY, ( INDEX TO VOC-LINK ) 0= IF, ( FORCED )
6     HERE 06 +ORIGIN ! ( POINT RE-ENTRY TO HERE )
7         0F # LDY, ( INDEX TO WARNING ) THEN, ( FROM IF, )
8         10 +ORIGIN LDA, UP STA, ( LOAD UP )
9         11 +ORIGIN LDA, UP 1+ STA,
10        BEGIN, 0C +ORIGIN ,Y LDA, ( FROM LITERAL AREA )
11            UP )Y STA, ( TO USER AREA )
12            DEY, 0< END,
13        'T ABORT 100 /MOD # LDA, IP 1+ STA,
14            # LDA, IP STA,
15        6C # LDA, W 1 - STA, 'T RP! JMP, ( RUN ) -->
```

SCR # 56

```
0 ( MATH UTILITY                                   DJK-WFR-79APR29 )
1 CODE S->D                                       ( EXTEND SINGLE INTEGER TO DOUBLE *)
2     BOT 1+ LDA, 0< IF, DEY, THEN, TYA, PHA, PUSH JMP,
3
4 : +-      0< IF MINUS ENDIF ; ( APPLY SIGN TO NUMBER BENEATH *)
5
6 : D+-     ( APPLY SIGN TO DOUBLE NUMBER BENEATH *)
7     0< IF DMINUS ENDIF ;
8
9 : ABS     DUP +- ; ( LEAVE ABSOLUTE VALUE *)
10 : DABS    DUP D+- ; ( DOUBLE INTEGER ABSOLUTE VALUE *)
11
12 : MIN     ( LEAVE SMALLER OF TWO NUMBERS *)
13     OVER OVER > IF SWAP ENDIF DROP ;
14 : MAX     ( LEAVE LARGET OF TWO NUMBERS *)
15     OVER OVER < IF SWAP ENDIF DROP ; -->
```

FORTH INTEREST GROUP

MAY 1, 1979

```

SCR # 57
0 ( MATH PACKAGE DJK-WFR-79APR29 )
1 : M* ( LEAVE SIGNED DOUBLE PRODUCT OF TWO SINGLE NUMBERS *)
2 OVER OVER XOR >R ABS SWAP ABS U* R> D+- ;
3 : M/ ( FROM SIGNED DOUBLE-3-2, SIGNED DIVISOR-1 *)
4 ( LEAVE SIGNED REMAINDER-2, SIGNED QUOTIENT-1 *)
5 OVER >R >R DABS R ABS U/
6 R> R XOR +- SWAP R> +- SWAP ;
7 : * U* DROP ; ( SIGNED PRODUCT *)
8 : /MOD >R S->D R> M/ ; ( LEAVE REM-2, QUOT-1 *)
9 : / /MOD SWAP DROP ; ( LEAVE QUOTIENT *)
10 : MOD /MOD DROP ; ( LEAVE REMAINDER *)
11 : */MOD ( TAKE RATION OF THREE NUMBERS, LEAVING *)
12 >R M* R> M/ ; ( REM-2, QUOTIENT-1 *)
13 : */ */MOD SWAP DROP ; ( LEAVE RATIO OF THREE NUMBS *)
14 : M/MOD ( DOUBLE, SINGLE DIVISOR ... REMAINDER, DOUBLE *)
15 >R 0 R U/ R> SWAP >R U/ R> ; -->

```

```

SCR # 58
0 ( DISC UTILITY, GENERAL USE WFR-79APR02 )
1 FIRST VARIABLE USE ( NEXT BUFFER TO USE, STALEST *)
2 FIRST VARIABLE PREV ( MOST RECENTLY REFERENCED BUFFER *)
3
4 : +BUF ( ADVANCE ADDRESS-1 TO NEXT BUFFER. RETURNS FALSE *)
5 84 ( I.E. B/BUF+4 ) + DUP LIMIT = ( IF AT PREV *)
6 IF DROP FIRST ENDIF DUP PREV @ - ;
7
8 : UPDATE ( MARK THE BUFFER POINTED TO BY PREV AS ALTERED *)
9 PREV @ @ 8000 OR PREV @ ! ;
10
11 : EMPTY-BUFFERS ( CLEAR BLOCK BUFFERS; DON'T WRITE TO DISC *)
12 FIRST LIMIT OVER - ERASE ;
13
14 : DR0 0 OFFSET ! ; ( SELECT DRIVE #0 *)
15 : DR1 07D0 OFFSET ! ; --> ( SELECT DRIVE #1 *)

```

```

SCR # 59
0 ( BUFFER WFR-79APR02 )
1 : BUFFER ( CONVERT BLOCK# TO STORAGE ADDRESS *)
2 USE @ DUP >R ( BUFFER ADDRESS TO BE ASSIGNED )
3 BEGIN +BUF UNTIL ( AVOID PREV ) USE ! ( FOR NEXT TIME )
4 R @ 0< ( TEST FOR UPDATE IN THIS BUFFER )
5 IF ( UPDATED, FLUSH TO DISC )
6 R 2+ ( STORAGE LOC. )
7 R @ 7FFF AND ( ITS BLOCK # )
8 0 R/W ( WRITE SECTOR TO DISC )
9 ENDIF
10 R ! ( WRITE NEW BLOCK # INTO THIS BUFFER )
11 R PREV ! ( ASSIGN THIS BUFFER AS 'PREV' )
12 R> 2+ ( MOVE TO STORAGE LOCATION ) ;
13
14 -->
15

```

```

SCR # 60
0 ( BLOCK WFR-79APR02 )
1 : BLOCK ( CONVERT BLOCK NUMBER TO ITS BUFFER ADDRESS *)
2 OFFSET @ + >R ( RETAIN BLOCK # ON RETURN STACK )
3 PREV @ DUP @ R - DUP + ( BLOCK = PREV ? )
4 IF ( NOT PREV )
5 BEGIN +BUF 0= ( TRUE UPON REACHING 'PREV' )
6 IF ( WRAPPED ) DROP R BUFFER
7 DUP R 1 R/W ( READ SECTOR FROM DISC )
8 2 - ( BACKUP )
9 ENDIF
10 DUP @ R - DUP + 0=
11 UNTIL ( WITH BUFFER ADDRESS )
12 DUP PREV !
13 ENDIF
14 R> DROP 2+ ;
15 -->

```

```

SCR # 61
0 ( TEXT OUTPUT FORMATTING WFR-79MAY03 )
1
2 : (LINE) ( LINE#, SCR#, ... BUFFER ADDRESS, 64 COUNT *)
3 >R C/L B/BUF */MOD R> B/SCR * +
4 BLOCK + C/L ;
5
6 : .LINE ( LINE#, SCR#, ... PRINTED *)
7 (LINE) -TRAILING TYPE ;
8
9 : MESSAGE ( PRINT LINE RELATIVE TO SCREEN #4 OF DRIVE 0 *)
10 WARNING @
11 IF ( DISC IS AVAILABLE )
12 -DUP IF 4 OFFSET @ B/SCR / - .LINE ENDIF
13 ELSE ." MSG # " . ENDIF ;
14 -->
15

```

```

SCR # 62
0 ( LOAD, --> WFR-79APR02 )
1
2 : LOAD ( INTERPRET SCREENS FROM DISC *)
3 BLK @ >R IN @ >R 0 IN ! B/SCR * BLK !
4 INTERPRET R> IN ! R> BLK ! ;
5
6 : --> ( CONTINUE INTERPRETATION ON NEXT SCREEN *)
7 ?LOADING 0 IN ! B/SCR BLK @ OVER
8 MOD - BLK +! ; IMMEDIATE
9
10 -->
11
12
13
14
15

```

```

SCR # 63
0 ( INSTALLATION DEPENDENT TERMINAL I-O, TIM WFR-79APR26 )
1 ( EMIT ) ASSEMBLER
2 HERE -2 BYTE.IN EMIT ! ( VECTOR EMITS' CF TO HERE )
3 XSAVE STX, BOT LDA, 7F # AND, 72C6 JSR, XSAVE LDX,
4 CLC, 1A # LDY, UP )Y LDA, 01 # ADC, UP )Y STA,
5 INY, UP )Y LDA, 00 # ADC, UP )Y STA, POP JMP,
6 ( AND INCREMENT 'OUT' )
7 ( KEY )
8 HERE -2 BYTE.IN KEY ! ( VECTOR KEYS' CF TO HERE )
9 XSAVE STX, BEGIN, 8 # LDX,
10 BEGIN, 6E02 LDA, .A LSR, CS END, 7320 JSR,
11 BEGIN, 731D JSR, 0 X) CMP, 0 X) CMP, 0 X) CMP,
12 0 X) CMP, 0 X) CMP, 6E02 LDA, .A LSR, PHP, TYA,
13 .A LSR, PLP, CS IF, 80 # ORA, THEN, TAY, DEX,
14 0= END, 731D JSR, FF # EOR, 7F # AND, 0= NOT END,
15 XSAVE LDX, PUSHOA JMP, -->

```

```

SCR # 64
0 ( INSTALLATION DEPENDENT TERMINAL I-O, TIM WFR-79APR02 )
1
2 ( ?TERMINAL )
3 HERE -2 BYTE.IN ?TERMINAL ! ( VECTOR LIKEWISE )
4 1 # LDA, 6E02 BIT, 0= NOT IF,
5 BEGIN, 731D JSR, 6E02 BIT, 0= END, INY, THEN,
6 TYA, PUSHOA JMP,
7
8 ( CR )
9 HERE -2 BYTE.IN CR ! ( VECTOR CRS' CF TO HERE )
10 XSAVE STX, 728A JSR, XSAVE LDX, NEXT JMP,
11
12 -->
13
14
15

```

```

SCR # 65
0 ( INSTALLATION DEPENDENT DISC WFR-79APR02 )
1 6900 CONSTANT DATA ( CONTROLLER PORT *)
2 6901 CONSTANT STATUS ( CONTROLLER PORT *)
3
4
5 : #HL ( CONVERT DECIMAL DIGIT FOR DISC CONTROLLER *)
6 0 0A U/ SWAP 30 + HOLD ;
7
8 -->
9
10
11
12
13
14
15

```

```

SCR # 66
0 ( D/CHAR, ?DISC, WFR-79MAR23 )
1 CODE D/CHAR ( TEST CHAR-1. EXIT TEST BOOL-2, NEW CHAR-1 *)
2 DEX, DEX, BOT 1+ STY, CO # LDA,
3 BEGIN, STATUS BIT, 0= NOT END, ( TILL CONTROL READY )
4 DATA LDA, BOT STA, ( SAVE CHAR )
5 SEC CMP, 0= IF, INY, THEN, SEC STY, NEXT JMP,
6
7 : ?DISC ( UPON NAK SHOW ERR MSG, QUIT. ABSORBS TILL *)
8 1 D/CHAR >R 0= ( EOT, EXCEPT FOR SOH *)
9 IF ( NOT SOH ) R 15 =
10 IF ( NAK ) CR
11 BEGIN 4 D/CHAR EMIT
12 UNTIL ( PRINT ERR MSG TIL EOT ) QUIT
13 ENDIF ( FOR ENQ, ACK )
14 BEGIN 4 D/CHAR DROP UNTIL ( AT EOT )
15 ENDIF R> DROP ; -->

```

```

SCR # 67
0 ( BLOCK-WRITE WFR-790103 )
1 CODE BLOCK-WRITE ( SEND TO DISC FROM ADDRESS-2, COUNT-1 *)
2 2 # LDA, SETUP JSR, ( WITH EOT AT END *)
3 BEGIN, 02 # LDA,
4 BEGIN, STATUS BIT, 0= END, ( TILL IDLE )
5 N CPY, 0=
6 IF, ( DONE ) 04 # LDA, STATUS STA, DATA STA,
7 NEXT JMP,
8 THEN,
9 N 2+ )Y LDA, DATA STA, INY,
10 0= END, ( FORCED TO BEGIN )
11
12 -->
13
14
15

```

```

SCR # 68
0 ( BLOCK-READ, WFR-790103 )
1
2 CODE BLOCK-READ ( BUF.ADDR-1. EXIT AT 128 CHAR OR CONTROL *)
3 1 # LDA, SETUP JSR,
4 BEGIN, CO # LDA,
5 BEGIN, STATUS BIT, 0= NOT END, ( TILL FLAG )
6 50 ( BVC, D6=DATA )
7 IF, DATA LDA, N )Y STA, INY, SWAP
8 0< END, ( LOOP TILL 128 BYTES )
9 THEN, ( OR D6=0, SO D7=1, )
10 NEXT JMP,
11
12 -->
13
14
15

```


SCR # 69

```

0 ( R/W FOR PERSCI 1070 CONTROLLER WFR-79MAY03 )
1 0A ALLOT HERE ( WORKSPACE TO PREPARE DISC CONTROL TEXT )
2 ( IN FORM: C TT SS /D, TT=TRACK, SS=SECTOR, D=DRIVE )
3 ( C = 1 TO READ, 0 TO WRITE * )
4 : R/W ( READ/WRITE DISC BLOCK * )
5 ( BUFFER ADDRESS-3, BLOCK #-2, 1=READ 0=WRITE * )
6 LITERAL HLD ! ( JUST AFTER WORKSPACE ) SWAP
7 0 OVER > OVER 0F9F > OR 6 ?ERROR
8 07D0 ( 2000 SECT/DR ) /MOD #HL DROP 2F HOLD BL HOLD
9 1A /MOD SWAP 1+ #HL #HL DROP BL HOLD ( SECTOR 01-26 )
10 #HL #HL DROP BL HOLD ( TRACK 00-76 )
11 DUP
12 IF 49 ( I=READ ) ELSE 4F ( O=WRITE ) ENDIF
13 HOLD HLD @ 0A BLOCK-WRITE ( SEND TEXT ) ?DISC
14 IF BLOCK-READ ELSE B/BUF BLOCK-WRITE ENDIF
15 ?DISC ; -->

```

SCR # 70

```

0 ( FORWARD REFERENCES WFR-79MAR30 )
1 00 BYTE.IN : REPLACED.BY ?EXEC
2 02 BYTE.IN : REPLACED.BY !CSP
3 04 BYTE.IN : REPLACED.BY CURRENT
4 08 BYTE.IN : REPLACED.BY CONTEXT
5 0C BYTE.IN : REPLACED.BY CREATE
6 0E BYTE.IN : REPLACED.BY ]
7 10 BYTE.IN : REPLACED.BY ( ;CODE )
8 00 BYTE.IN ; REPLACED.BY ?CSP
9 02 BYTE.IN ; REPLACED.BY COMPILE
10 06 BYTE.IN ; REPLACED.BY SMUDGE
11 08 BYTE.IN ; REPLACED.BY [
12 00 BYTE.IN CONSTANT REPLACED.BY CREATE
13 02 BYTE.IN CONSTANT REPLACED.BY SMUDGE
14 04 BYTE.IN CONSTANT REPLACED.BY ,
15 06 BYTE.IN CONSTANT REPLACED.BY ( ;CODE ) -->

```

SCR # 71

```

0 ( FORWARD REFERENCES WFR-79APR29 )
1 02 BYTE.IN VARIABLE REPLACED.BY ( ;CODE )
2 02 BYTE.IN USER REPLACED.BY ( ;CODE )
3 06 BYTE.IN ?ERROR REPLACED.BY ERROR
4 0F BYTE.IN ." REPLACED.BY WORD
5 1D BYTE.IN ." REPLACED.BY WORD
6 00 BYTE.IN (ABORT) REPLACED.BY ABORT
7 19 BYTE.IN ERROR REPLACED.BY MESSAGE
8 25 BYTE.IN ERROR REPLACED.BY QUIT
9 0C BYTE.IN WORD REPLACED.BY BLOCK
10 1E BYTE.IN CREATE REPLACED.BY MESSAGE
11 2C BYTE.IN CREATE REPLACED.BY MIN
12 04 BYTE.IN ABORT REPLACED.BY DRO
13 2C BYTE.IN BUFFER REPLACED.BY R/W
14 30 BYTE.IN BLOCK REPLACED.BY R/W DECIMAL ;S
15

```

```

SCR # 72
0 ( ' , FORGET, \                                WFR-79APR28 )
1 HEX      3  WIDTH !
2 : '      ( FIND NEXT WORDS PFA; COMPILE IT, IF COMPILING *)
3   -FIND  0=  0  ?ERROR DROP [COMPILE] LITERAL ;
4                                     IMMEDIATE
5
6 : FORGET      ( FOLLOWING WORD FROM CURRENT VOCABULARY *)
7   CURRENT @ CONTEXT @ - 18 ?ERROR
8   [COMPILE] ' DUP FENCE @ < 15 ?ERROR
9   DUP NFA DP ! LFA @ CURRENT @ ! ;
10
11
12
13 -->
14
15

```

```

SCR # 73
0 (  CONDITIONAL COMPILER, PER SHIRA                WFR-79APR01 )
1 : BACK      HERE - , ;                          ( RESOLVE BACKWARD BRANCH *)
2
3 : BEGIN     ?COMP HERE 1 ;                      IMMEDIATE
4
5 : ENDIF     ?COMP 2 ?PAIRS HERE OVER - SWAP ! ; IMMEDIATE
6
7 : THEN      [COMPILE] ENDIF ; IMMEDIATE
8
9 : DO        COMPILE (DO) HERE 3 ;                IMMEDIATE
10
11 : LOOP      3 ?PAIRS COMPILE (LOOP) BACK ; IMMEDIATE
12
13 : +LOOP     3 ?PAIRS COMPILE (+LOOP) BACK ; IMMEDIATE
14
15 : UNTIL     1 ?PAIRS COMPILE OBRANCH BACK ; IMMEDIATE -->

```

```

SCR # 74
0 (  CONDITIONAL COMPILER                WFR-79APR01 )
1 : END      [COMPILE] UNTIL ; IMMEDIATE
2
3 : AGAIN     1 ?PAIRS COMPILE BRANCH BACK ; IMMEDIATE
4
5 : REPEAT    >R >R [COMPILE] AGAIN
6             R> R> 2 - [COMPILE] ENDIF ; IMMEDIATE
7
8 : IF        COMPILE OBRANCH HERE 0 , 2 ; IMMEDIATE
9
10 : ELSE      2 ?PAIRS COMPILE BRANCH HERE 0 ,
11            SWAP 2 [COMPILE] ENDIF 2 ; IMMEDIATE
12
13 : WHILE     [COMPILE] IF 2+ ; IMMEDIATE
14
15 -->

```

```

SCR # 75
0 ( NUMERIC PRIMITIVES WFR-79APR01 )
1 : SPACES 0 MAX -DUP IF 0 DO SPACE LOOP ENDIF ;
2
3 : <# PAD HLD ! ;
4
5 : #> DROP DROP HLD @ PAD OVER - ;
6
7 : SIGN ROT 0< IF 2D HOLD ENDIF ;
8
9 : # ( CONVERT ONE DIGIT, HOLDING IN PAD * )
10 BASE @ M/MOD ROT 9 OVER < IF 7 + ENDIF 30 + HOLD ;
11
12 : #S BEGIN # OVER OVER OR 0= UNTIL ;
13 -->
14
15

```

```

SCR # 76
0 ( OUTPUT OPERATORS WFR-79APR20 )
1 : D.R ( DOUBLE INTEGER OUTPUT, RIGHT ALIGNED IN FIELD * )
2 >R SWAP OVER DABS <# #S SIGN #>
3 R> OVER - SPACES TYPE ;
4
5 : D. 0 D.R SPACE ; ( DOUBLE INTEGER OUTPUT * )
6
7 : .R >R S->D R> D.R ; ( ALIGNED SINGLE INTEGER * )
8
9 : . S->D D. ; ( SINGLE INTEGER OUTPUT * )
10
11 : ? @ . ; ( PRINT CONTENTS OF MEMORY * )
12
13 ' . CFA ' MESSAGE 2A + ! ( PRINT MESSAGE NUMBER )
14 -->
15

```

```

SCR # 77
0 ( PROGRAM DOCUMENTATION WFR-79APR20 )
1 HEX
2 : LIST ( LIST SCREEN BY NUMBER ON STACK * )
3 DECIMAL CR DUP SCR !
4 ." SCR # " . 10 0 DO CR I 3 .R SPACE
5 I SCR @ .LINE LOOP CR ;
6
7 : INDEX ( PRINT FIRST LINE OF EACH SCREEN FROM-2, TO-1 * )
8 OC EMIT ( FORM FEED ) CR 1+ SWAP
9 DO CR I 3 .R SPACE
10 0 I .LINE
11 ?TERMINAL IF LEAVE ENDIF LOOP ;
12 : TRIAD ( PRINT 3 SCREENS ON PAGE, CONTAINING # ON STACK * )
13 OC EMIT ( FF ) 3 / 3 * 3 OVER + SWAP
14 DO CR I LIST LOOP CR
15 OF MESSAGE CR ; DECIMAL -->

```

```

SCR # 78
0 ( TOOLS
1 HEX
2 : VLIST ( LIST CONTEXT VOCABULARY *)
3 80 OUT ! CONTEXT @ @
4 BEGIN OUT @ C/L > IF CR 0 OUT ! ENDIF
5 DUP ID. SPACE SPACE PFA LFA @
6 DUP 0= ?TERMINAL OR UNTIL DROP ;
7 -->
8
9
10
11
12
13
14
15

```

```

SCR # 79
0 ( TOOLS
1 HEX
2
3 CREATE MON ( CALL MONITOR, SAVING RE-ENTRY TO FORTH *)
4 0 C, 4C C, ' LIT 18 + , SMUDGE
5
6
7
8
9
10 DECIMAL
11 HERE FENCE !
12 HERE 28 +ORIGIN ! ( COLD START FENCE )
13 HERE 30 +ORIGIN ! ( COLD START DP )
14 LATEST 12 +ORIGIN ! ( TOPMOST WORD )
15 ' FORTH 6 + 32 +ORIGIN ! ( COLD VOC-LINK ) ;S

```

```

SCR # 80
0 -->
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15

```

This is a sample editor, compatible with the fig-FORTH model and simple terminal devices. The line and screen editing functions are portable. The code definition for the string MATCH could be written high level or translated.

```
SCR # 87
0 ( TEXT, LINE WFR-79MAY01 )
1 FORTH DEFINITIONS HEX
2 : TEXT ( ACCEPT FOLLOWING TEXT TO PAD *)
3     HERE C/L 1+ BLANKS WORD HERE PAD C/L 1+ CMOVE ;
4
5 : LINE ( RELATIVE TO SCR, LEAVE ADDRESS OF LINE *)
6     DUP FFF0 AND 17 ?ERROR ( KEEP ON THIS SCREEN )
7     SCR @ (LINE) DROP ;
8 -->
9
10
11
12
13
14
15
```

```
SCR # 88
0 ( LINE EDITOR WFR-79MAY03 )
1 VOCABULARY EDITOR IMMEDIATE HEX
2 : WHERE ( PRINT SCREEN # AND IMAGE OF ERROR *)
3     DUP B/SCR / DUP SCR ! ." SCR # " DECIMAL .
4     SWAP C/L /MOD C/L * ROT BLOCK + CR C/L TYPE
5     CR HERE C@ - SPACES 5E EMIT [COMPILE] EDITOR QUIT ;
6
7 EDITOR DEFINITIONS
8 : #LOCATE ( LEAVE CURSOR OFFSET-2, LINE-1 *)
9     R# @ C/L /MOD ;
10 : #LEAD ( LINE ADDRESS-2, OFFSET-1 TO CURSOR *)
11     #LOCATE LINE SWAP ;
12 : #LAG ( CURSOR ADDRESS-2, COUNT-1 AFTER CURSOR *)
13     #LEAD DUP >R + C/L R> - ;
14 : -MOVE ( MOVE IN BLOCK BUFFER ADDR FROM-2, LINE TO-1 *)
15     LINE C/L CMOVE UPDATE ; -->
```

```
SCR # 89
0 ( LINE EDITING COMMANDS WFR-79MAY03 )
1 : H ( HOLD NUMBERED LINE AT PAD *)
2     LINE PAD 1+ C/L DUP PAD C! CMOVE ;
3
4 : E ( ERASE LINE-1 WITH BLANKS *)
5     LINE C/L BLANKS UPDATE ;
6
7 : S ( SPREAD MAKING LINE # BLANK *)
8     DUP 1 - ( LIMIT ) OE ( FIRST TO MOVE )
9     DO I LINE I 1+ -MOVE -1 +LOOP E ;
10
11 : D ( DELETE LINE-1, BUT HOLD IN PAD *)
12     DUP H OF DUP ROT
13     DO I 1+ LINE I -MOVE LOOP E ;
14
15 -->
```

```

SCR # 90
0 ( LINE EDITING COMMANDS WFR-79MAY03 )
1
2 : M ( MOVE CURSOR BY SIGNED AMOUNT-1, PRINT ITS LINE *)
3 R# +! CR SPACE #LEAD TYPE 5F EMIT
4 #LAG TYPE #LOCATE . DROP ;
5
6 : T ( TYPE LINE BY #-1, SAVE ALSO IN PAD *)
7 DUP C/L * R# ! DUP H 0 M ;
8
9 : L ( RE-LIST SCREEN *)
10 SCR @ LIST 0 M ;
11 -->
12
13
14
15

```

```

SCR # 91
0 ( LINE EDITING COMMANDS WFR-790105 )
1 : R ( REPLACE ON LINE #-1, FROM PAD *)
2 PAD 1+ SWAP -MOVE ;
3
4 : P ( PUT FOLLOWING TEXT ON LINE-1 *)
5 1 TEXT R ;
6
7 : I ( INSERT TEXT FROM PAD ONTO LINE # *)
8 DUP S R ;
9 CR
10 : TOP ( HOME CURSOR TO TOP LEFT OF SCREEN *)
11 0 R# ! ;
12 -->
13
14
15

```

```

SCR # 92
0 ( SCREEN EDITING COMMANDS WFR-79APR27 )
1 : CLEAR ( CLEAR SCREEN BY NUMBER-1 *)
2 SCR ! 10 0 DO FORTH I EDITOR E LOOP ;
3
4 : FLUSH ( WRITE ALL UPDATED BLOCKS TO DISC *)
5 [ LIMIT FIRST - B/BUF 4 + / ] ( NUMBER OF BUFFERS)
6 LITERAL 0 DO 7FFF BUFFER DROP LOOP ;
7
8 : COPY ( DUPLICATE SCREEN-2, ONTO SCREEN-1 *)
9 B/SCR * OFFSET @ + SWAP B/SCR * B/SCR OVER + SWAP
10 DO DUP FORTH I BLOCK 2 - ! 1+ UPDATE LOOP
11 DROP FLUSH ;
12 -->
13
14
15

```

SCR # 93

```

0 ( STRING EDITING PRIMITIVES WFR-79APR22 )
1 CODE MATCH ( CURSOR ADDRESS-4, BYTES LEFT-3, STRING ADDR-2 *)
2 ( ITS COUNT-1. LEAVE BOOLEAN-2, CURSOR ADVANCEMENT-1 *)
3 4 # LDA, SETUP JSR, DEX, DEX, DEX, DEX,
4 BOT STY, BOT 1+ STY,
5 BEGIN, ( NEW MATCH ) DROP ( ERR ) FF # LDY,
6 BEGIN, DROP ( ERR ) INY, N CPY, CS NOT
7 IF, ( Y < STRING ) N 2+ )Y LDA, N 6 + )Y CMP,
8 ROT 1 0= NOT UNTIL, ( REPEAT FOR GOOD MATCH )
9 N 6 + INC, 0= IF, N 7 + INC, ENDIF,
10 BOT INC, 0= IF, BOT 1+ INC, ENDIF, ( CUR MOT )
11 N 4 + LDA, 0= IF, N 5 + DEC, ENDIF,
12 N 4 + DEC, ( DECREMENT BUFFER REMAINING )
13 N 4 + LDA, N CMP, ( REMAINING - STRING SIZE )
14 N 5 + LDA, N 1+ SBC,
15 ROT 1 CS NOT UNTIL, --> ( REPT TILL OUT OF BUFFER )

```

SCR # 94

```

0 ( CONCLUSION OF STRING MATCH WFR-79APR22 )
1 0 # LDA, SEC STA, SEC 1+ STA, ( BOOLEAN FALSE )
2 N 4 + LDY, ( SPACE UNTIL END OF BUFFER )
3 ENDIF,
4 CLC, TYA, BOT ADC, PHA,
5 0 # LDA, BOT 1+ ADC, ( ADJUST CURSOR MOTION )
6 PUT JMP, C;
7 -->
8
9
10
11
12
13
14
15

```

SCR # 95

```

0 ( STRING EDITING COMMANDS WFR-79MAR24 )
1 : ILINE ( SCAN LINE WITH CURSOR FOR MATCH TO PAD TEXT, *)
2 ( UPDATE CURSOR, RETURN BOOLEAN *)
3 #LAG PAD COUNT MATCH R# +! ;
4
5 : FIND ( STRING AT PAD OVER FULL SCREEN RANGE, ELSE ERROR *)
6 BEGIN 3FF R# @ <
7 IF TOP PAD HERE C/L 1+ CMOVE 0 ERROR ENDIF
8 ILINE UNTIL ;
9
10 : DELETE ( BACKWARDS AT CURSOR BY COUNT-1 *)
11 >R #LAG + FORTH R - ( SAVE BLANK FILL LOCATION )
12 #LAG R MINUS R# +! ( BACKUP CURSOR )
13 #LEAD + SWAP CMOVE
14 R> BLANKS UPDATE ; ( FILL FROM END OF TEXT )
15 -->

```

```

SCR # 96
0 ( STRING EDITOR COMMANDS                                WFR-79MAR24 )
1 : N      ( FIND NEXT OCCURANCE OF PREVIOUS TEXT *)
2         FIND 0 M ;
3
4 : F      ( FIND OCCURANCE OF FOLLOWING TEXT *)
5         1 TEXT N ;
6
7 : B      ( BACKUP CURSOR BY TEXT IN PAD *)
8         PAD C@ MINUS M ;
9
10 : X     ( DELETE FOLLOWING TEXT *)
11        1 TEXT FIND PAD C@ DELETE 0 M ;
12
13 : TILL  ( DELETE ON CURSOR LINE, FROM CURSOR TO TEXT END *)
14        #LEAD + 1 TEXT ILINE 0= 0 ?ERROR
15        #LEAD + SWAP - DELETE 0 M ;      -->

```

```

SCR # 97
0 ( STRING EDITOR COMMANDS                                WFR-79MAR23 )
1 : C      ( SPREAD AT CURSOR AND COPY IN THE FOLLOWING TEXT *)
2         1 TEXT .PAD COUNT
3         #LAG ROT OVER MIN >R
4         FORTH R R# +! ( BUMP CURSOR )
5         R - >R      ( CHARS TO SAVE )
6         DUP HERE R CMOVE ( FROM OLD CURSOR TO HERE )
7         HERE #LEAD + R> CMOVE ( HERE TO CURSOR LOCATION )
8         R> CMOVE UPDATE ( PAD TO OLD CURSOR )
9         0 M ( LOOK AT NEW LINE ) ;
10 FORTH DEFINITIONS DECIMAL
11 LATEST 12 +ORIGIN ! ( TOP NFA )
12 HERE 28 +ORIGIN ! ( FENCE )
13 HERE 30 +ORIGIN ! ( DP )
14 ' EDITOR 6 + 32 +ORIGIN ! ( VOC-LINK )
15 HERE FENCE ! ;S

```

SCR # 98

```

0
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15

```